



IDEIA HOME DESIGN

DECORE A SUA CASA


MANUAL BELICHE POPPY



MANUAL DE MONTAJE
NOTICE DE MONTAGE
ASSEMBLY MANUAL
MANUALE PER IL MONTAGGIO
MONTAGEANLEITUNG
MANUAL DE MONTAGEM
INSTRUKCJE MONTAŻOWE

6833F Bo3


01 - 07/13

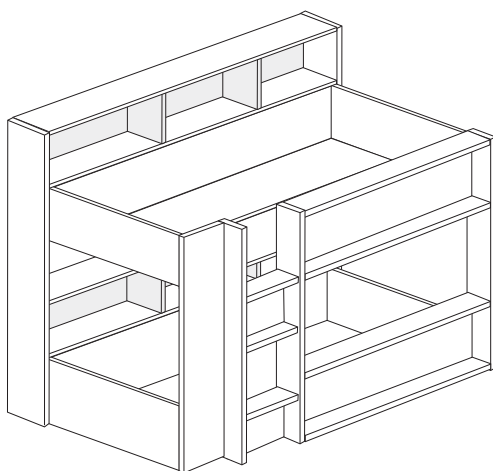

120 min




x 1

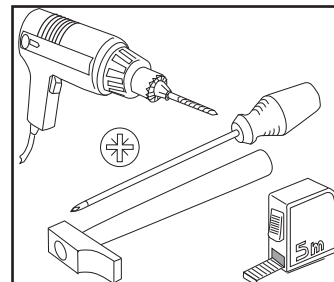

683322

683322


683323

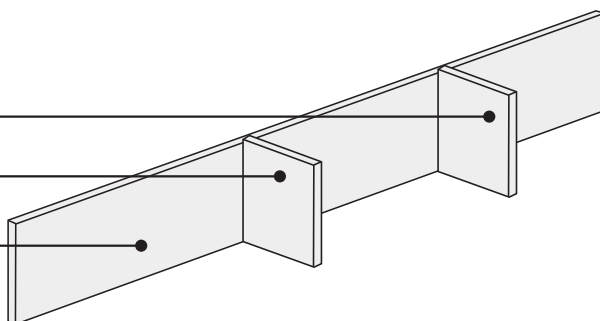

683322

683322

683323

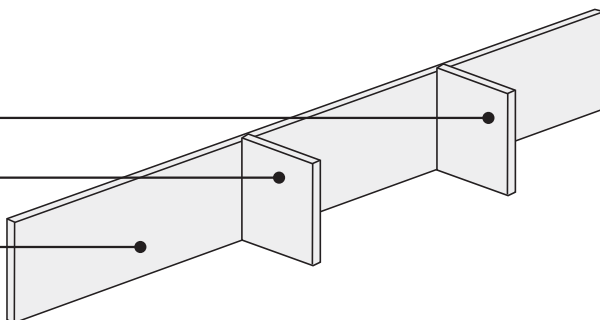

ANTES DE EMPEZAR
CONSULTE LOS CONSEJOS
PARA EL MONTAJE.

AVANT DE COMMENCER
CONSULTEZ LES
INSTRUCTIONS DE MONTAGE.

BEFORE STARTING REFER TO
THE ASSEMBY ADVICE.

PRIMA DI INIZIARE LEGGERE
I CONIGLI PER IL MONTAGGIO.

VOR DEM BEGINN EMPFIEHLT
ES SICH AUFMERKSAM DIE
HINWEISE ZUR MONTAGE ZU
LESEN.


ANTES DE COMEÇAR
CONSULTE OS CONSELHOS
PARA A MONTAGEM .

ZANIM PRZYSTAPIMY DO
MONTAŻU , PROSIMY
ZAPOZNAĆ SIĘ Z
NASTĘPUJACYMI
WSKAZÓWKAMI.

MANUAL DE MONTAJE
NOTICE DE MONTAGE
ASSEMBLY MANUAL
MANUALE PER IL MONTAGGIO
MONTAGEANLEITUNG
MANUAL DE MONTAGEM
INSTRUKCJE MONTAŻOWE

6835A Bo3


02 - 09/13

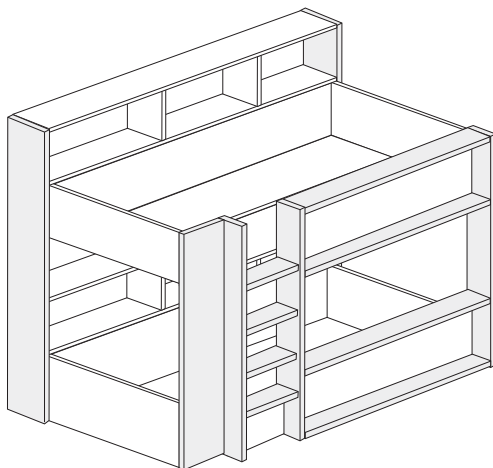

120 min



x 1

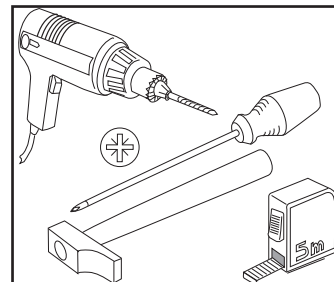

683508

683505

683509

683503

683502

683504

683505

683507

683501

683507

683505

683507

683507

683505

ANTES DE EMPEZAR
CONSULTE LOS CONSEJOS
PARA EL MONTAJE.

AVANT DE COMMENCER
CONSULTEZ LES
INSTRUCTIONS DE MONTAGE.

BEFORE STARTING REFER TO
THE ASSEMBY ADVICE.

PRIMA DI INIZIARE LEGGERE
I CONIGLI PER IL MONTAGGIO.

VOR DEM BEGINN EMPFIEHLT
ES SICH AUFMERKSAM DIE
HINWEISE ZUR MONTAGE ZU
LESEN.

ANTES DE COMEÇAR
CONSULTE OS CONSELHOS
PARA A MONTAGEM .

ZANIM PRZYSTAPIMY DO
MONTAŻU , PROSIMY
ZAPOZNAĆ SIĘ Z
NASTĘPUJĄCYMI
WSKAZÓWKAMI.

MANUAL DE MONTAJE
NOTICE DE MONTAGE
ASSEMBLY MANUAL
MANUALE PER IL MONTAGGIO
MONTAGEANLEITUNG
MANUAL DE MONTAGEM
INSTRUKCJE MONTAŻOWE

6830C Bo3




03 - 12/13



120 min



x 1

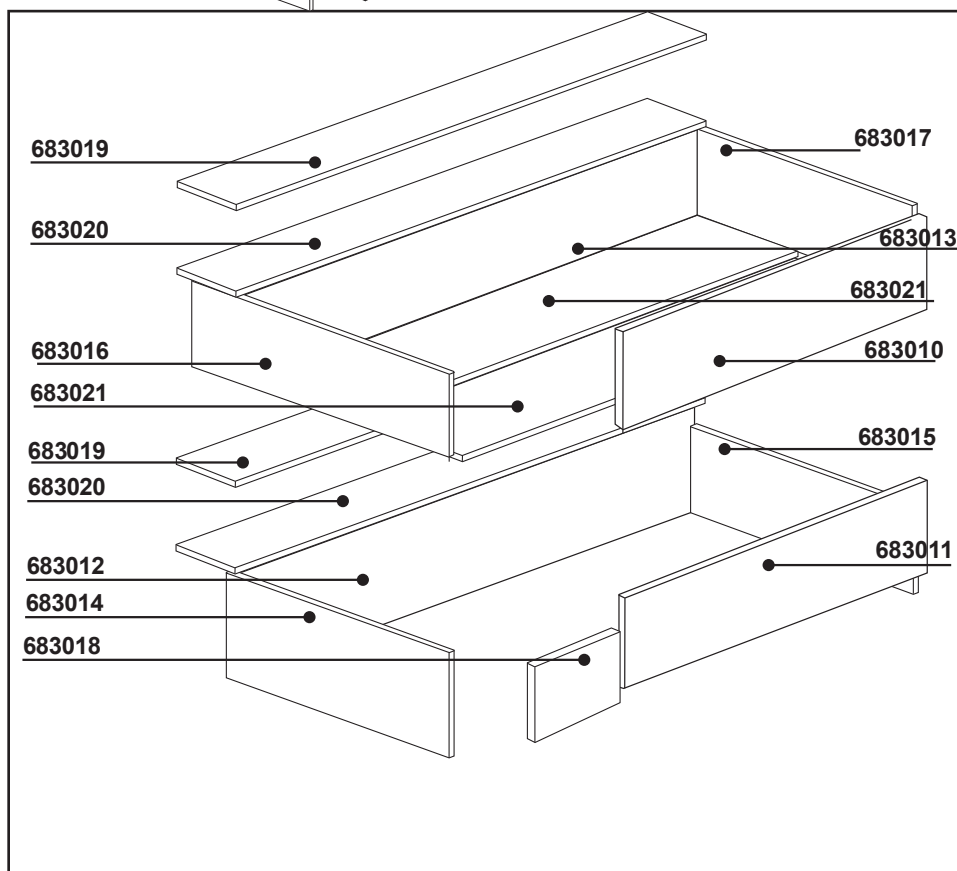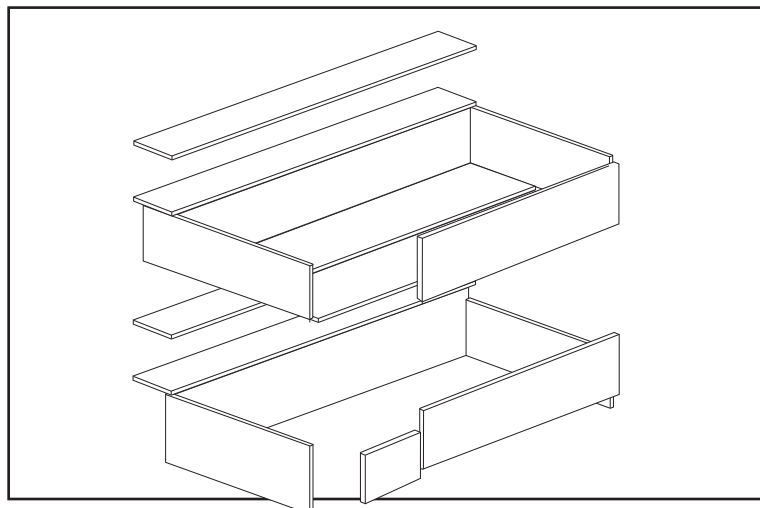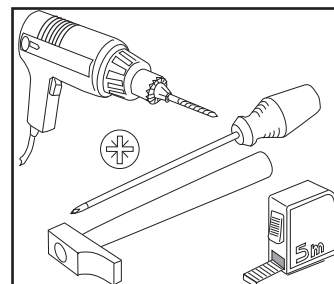

ANTES DE EMPEZAR
CONSULTE LOS CONSEJOS
PARA EL MONTAJE.

AVANT DE COMMENCER
CONSULTEZ LES
INSTRUCTIONS DE MONTAGE.




BEFORE STARTING REFER TO
THE ASSEMBY ADVICE.




PRIMA DI INIZIARE LEGGERE
I CONIGLI PER IL MONTAGGIO.

VOR DEM BEGINN EMPFIEHLT
ES SICH AUFMERKSAM DIE
HINWEISE ZUR MONTAGE ZU
LESEN.


ANTES DE COMEÇAR
CONSULTE OS CONSELHOS
PARA A MONTAGEM .

ZANIM PRZYSTAPIMY DO
MONTAŻU , PROSIMY
ZAPOZNAĆ SIĘ Z
NASTĘPUJĄCYMI
WSKAZÓWKAMI.

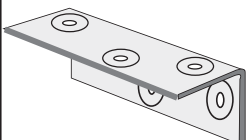
x12  SKM16 x12  TCK0311	x2  PCBL x4  PCBL	x12  TP4035	x6  EAR944	x2  PU5040				
x56  PE845 x32  EX16 x24  EX25 x12  TEBL	x17  TA550 x1  LLA4 x12  T34BL	x56  CL830	x16  C1070	x1  COLA	x84  TP3515	x18  TSM	x12  TM660A x16  TUEM61013	x4  EM670 x4  CE670

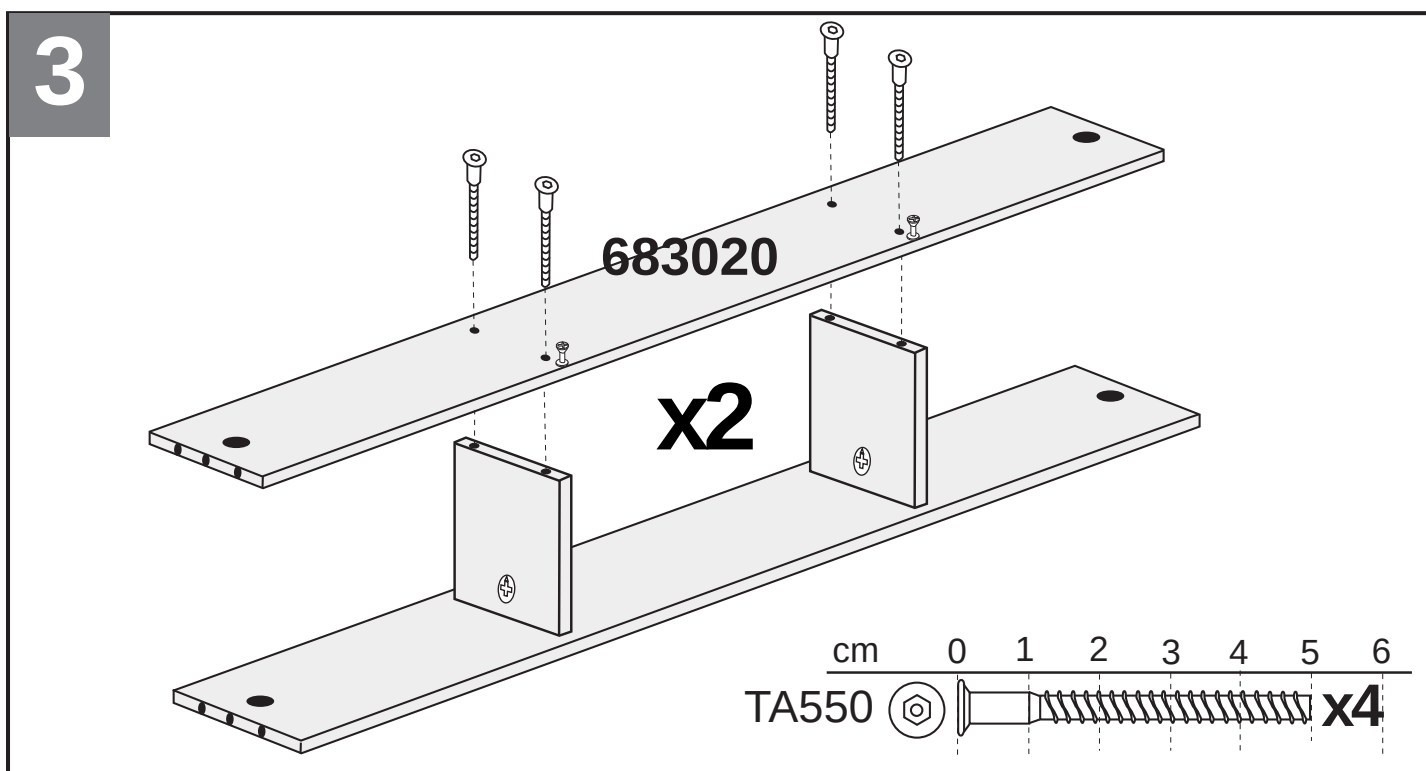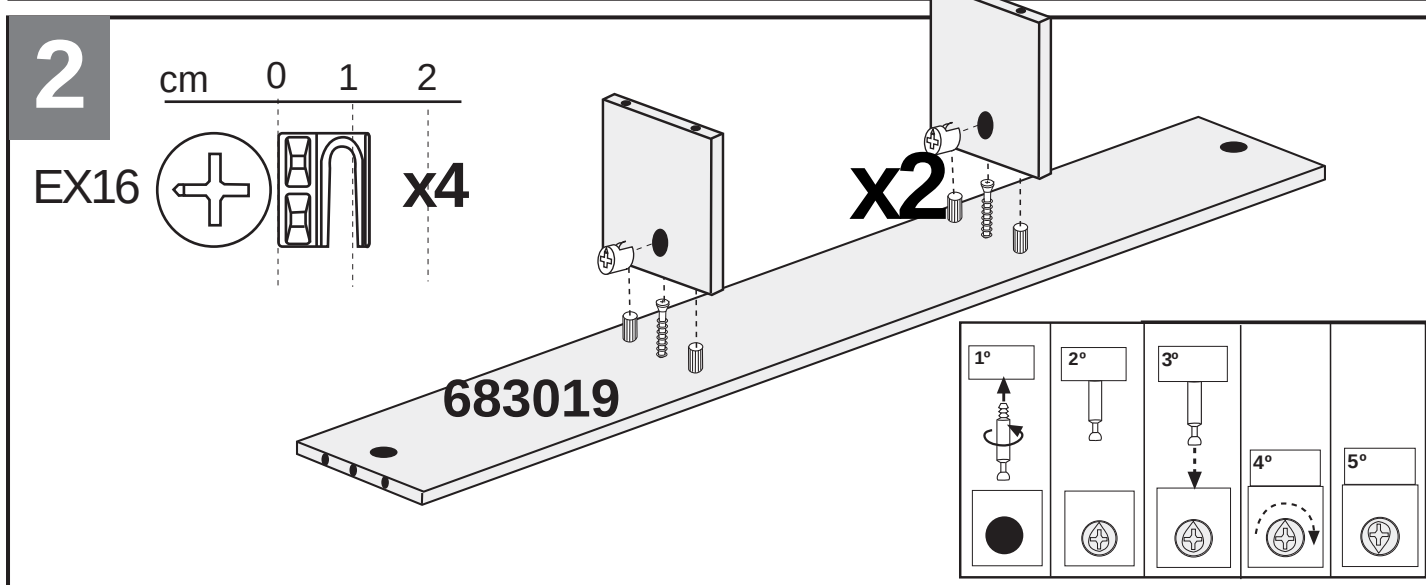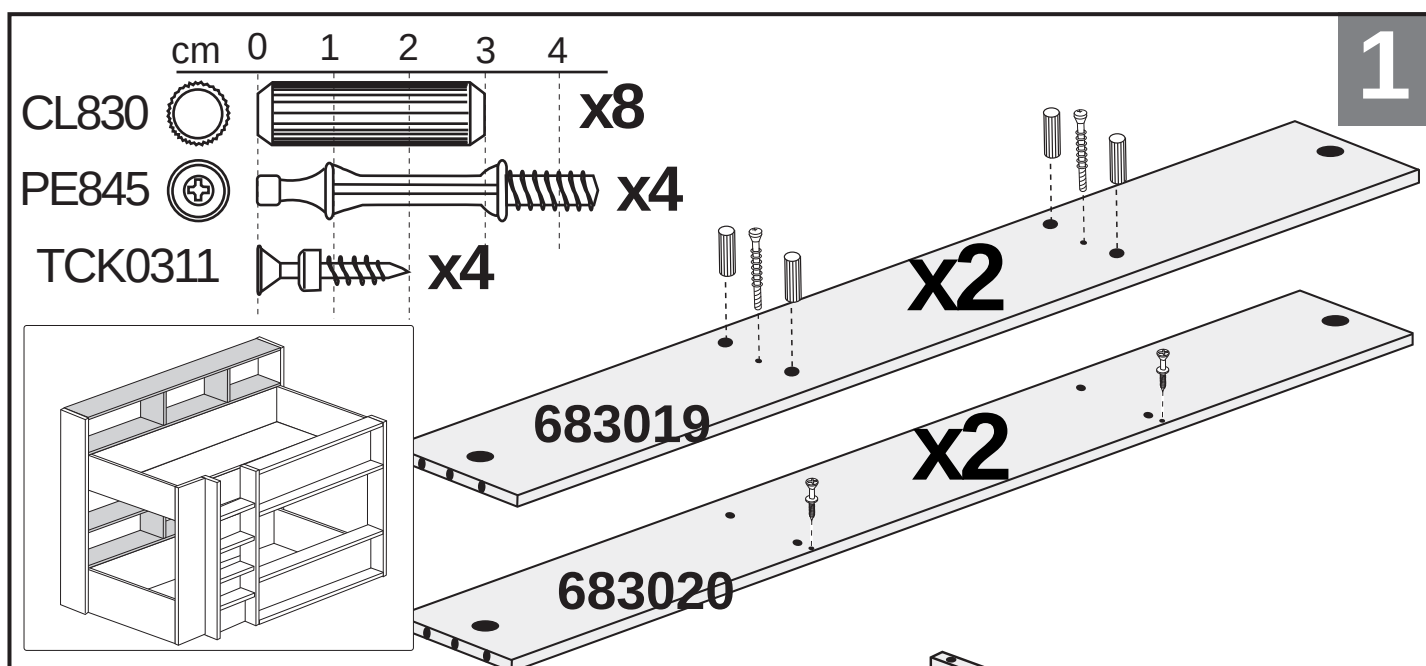



4

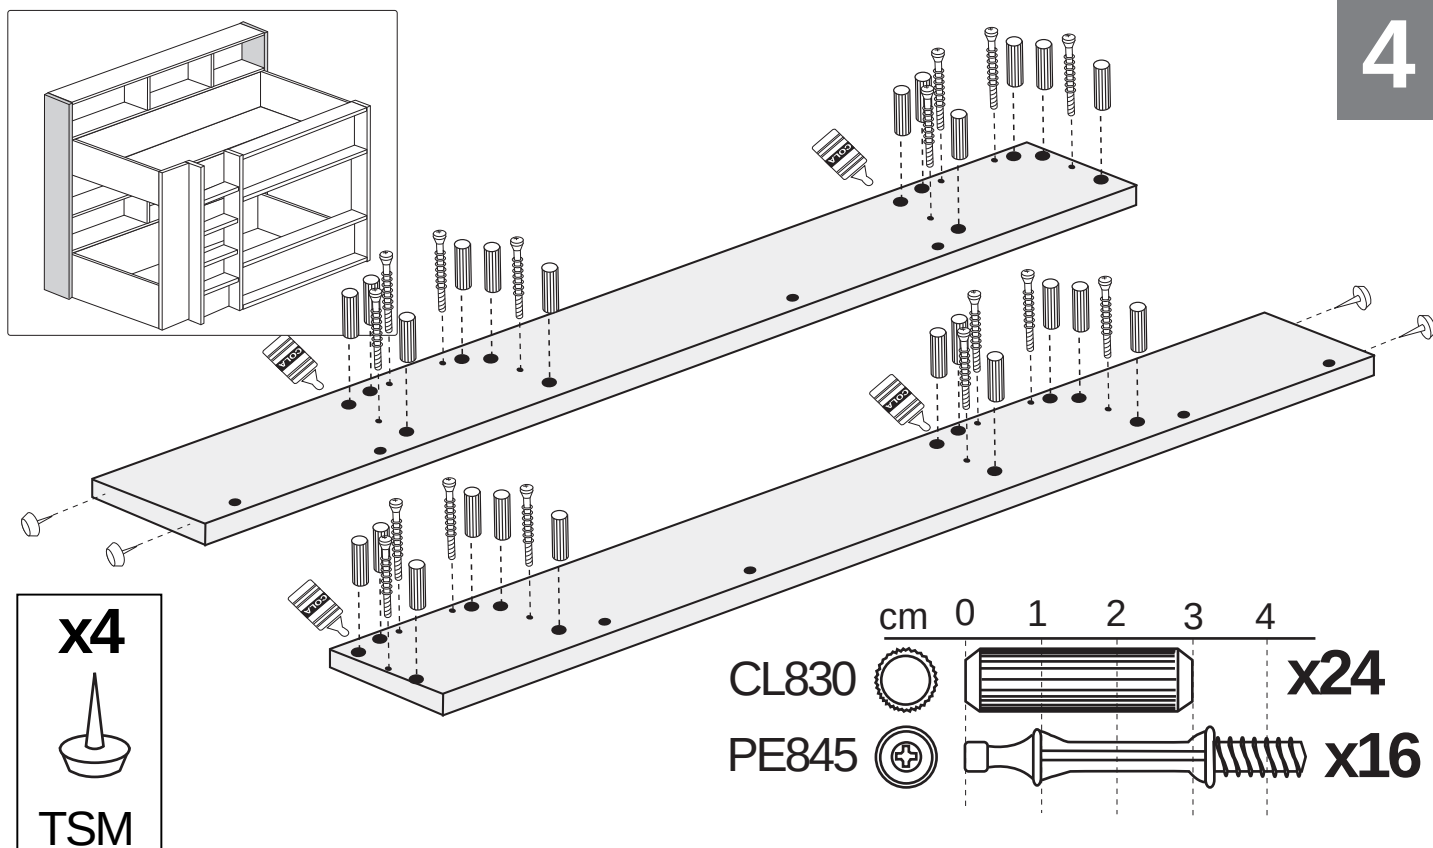



5

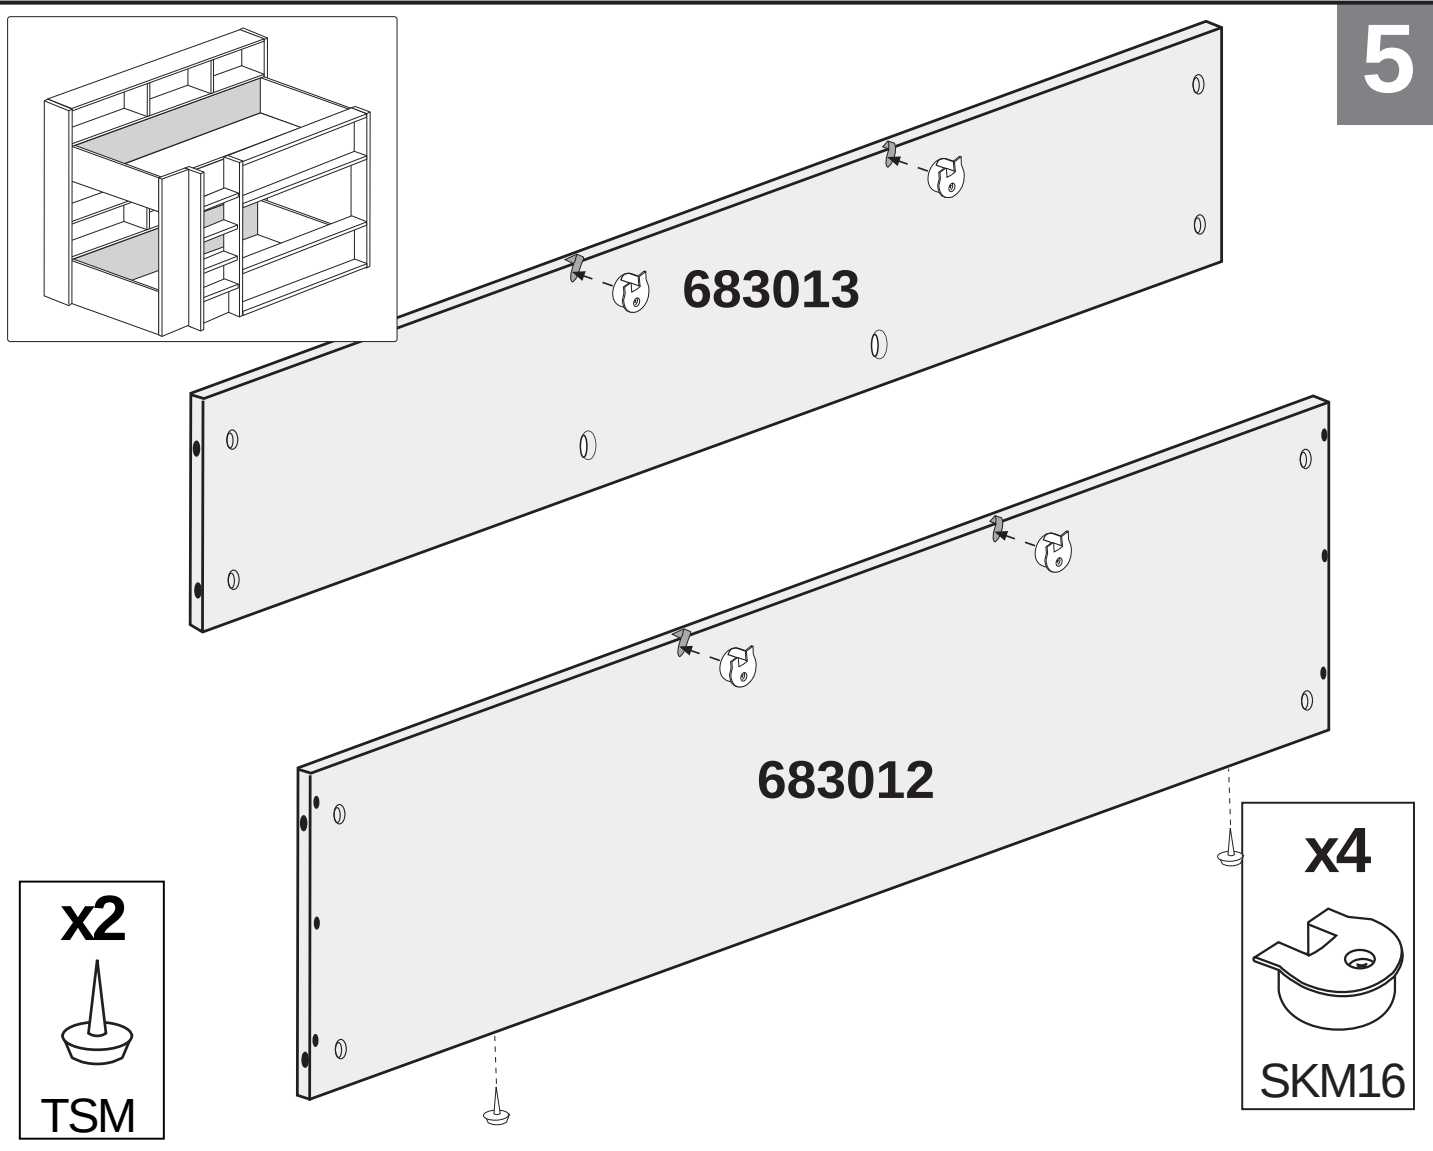


6

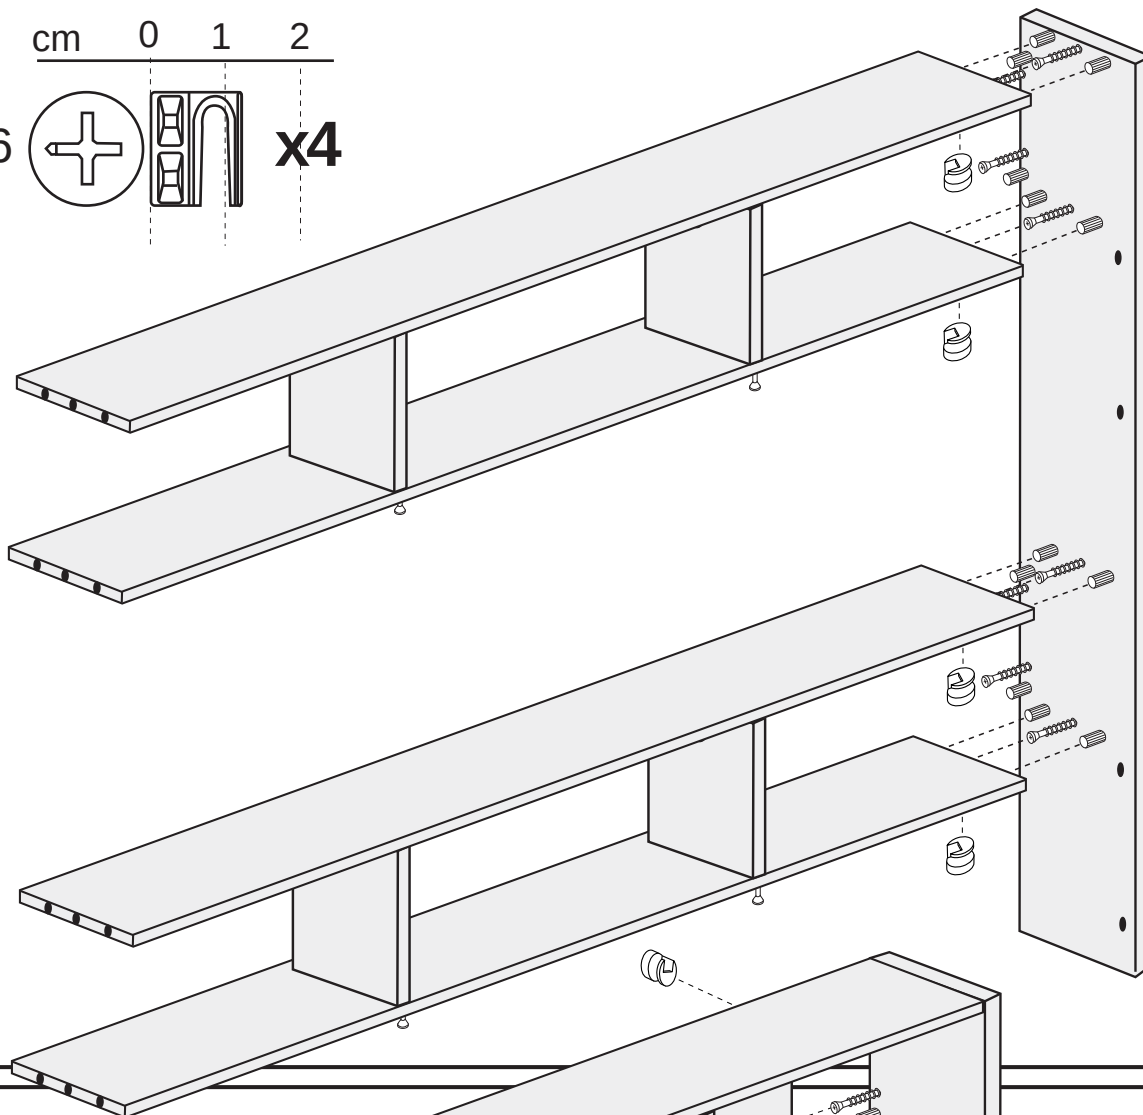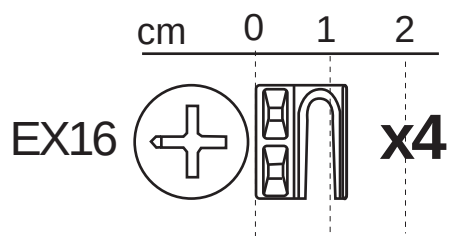

7

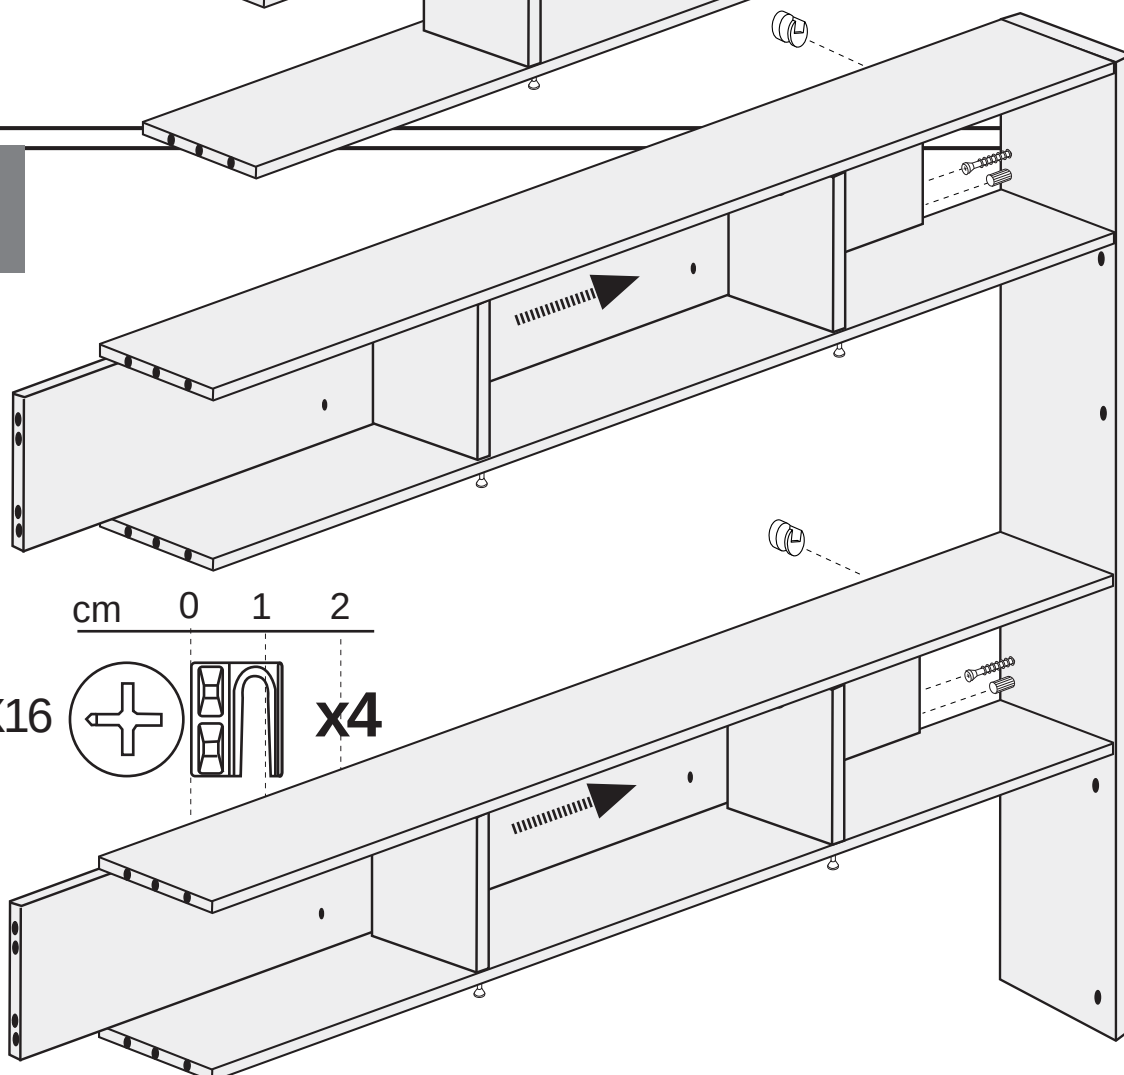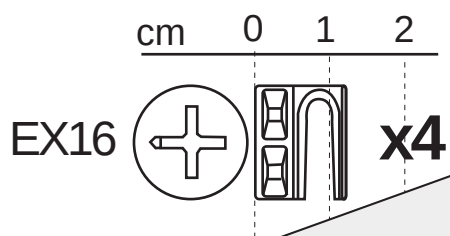

8

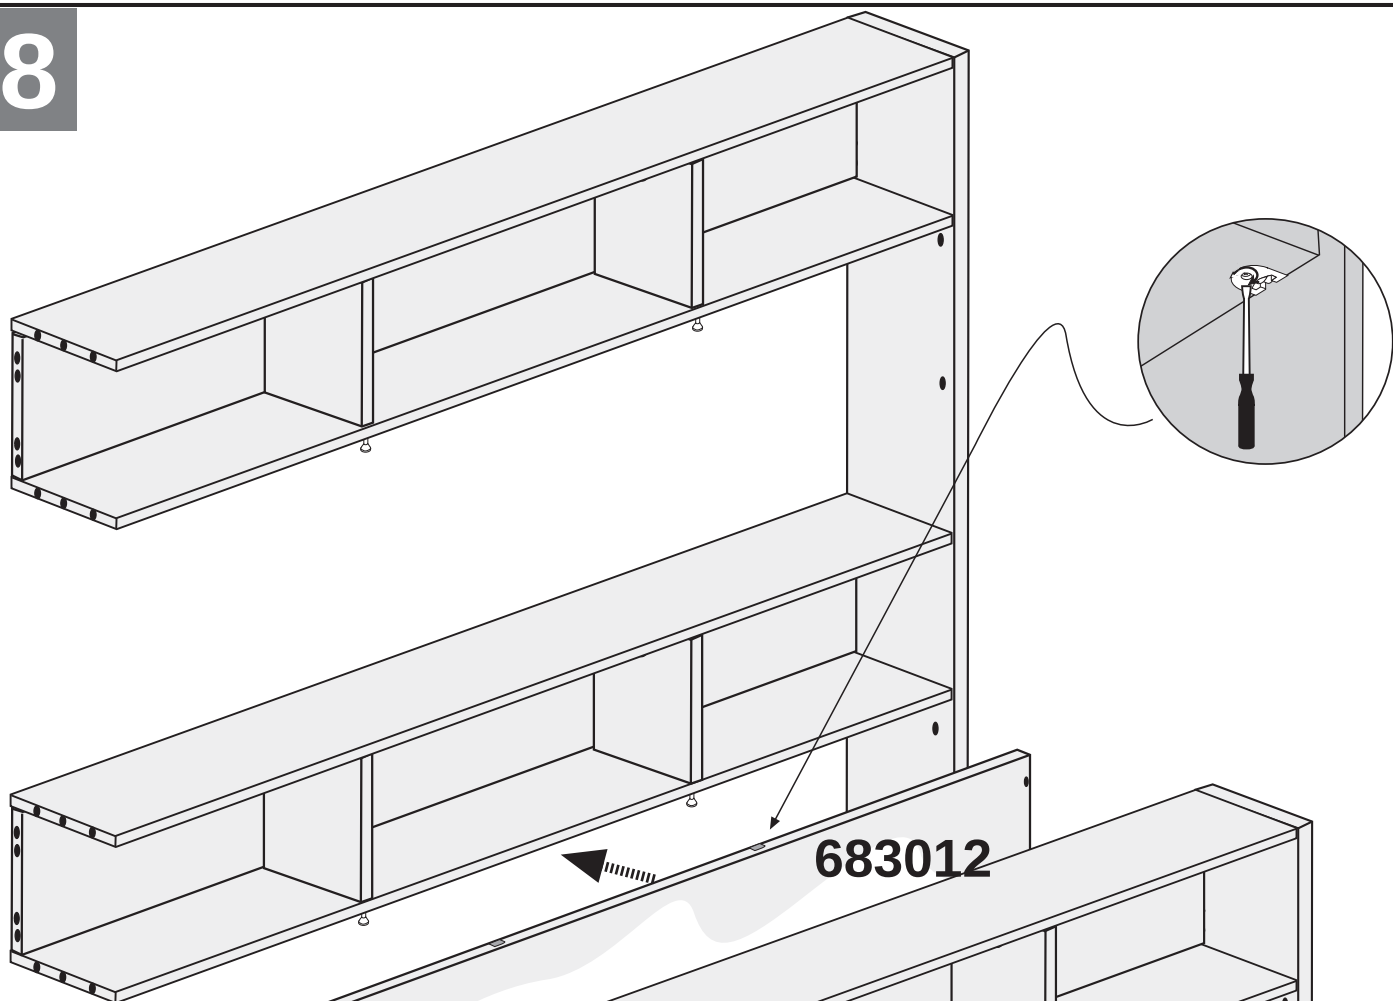

683012

cm 0 1 2

EX16  x8

cm 0 1 2 3 4 5 6

TM660A




 x4




TUEM61013

 x4


9

10

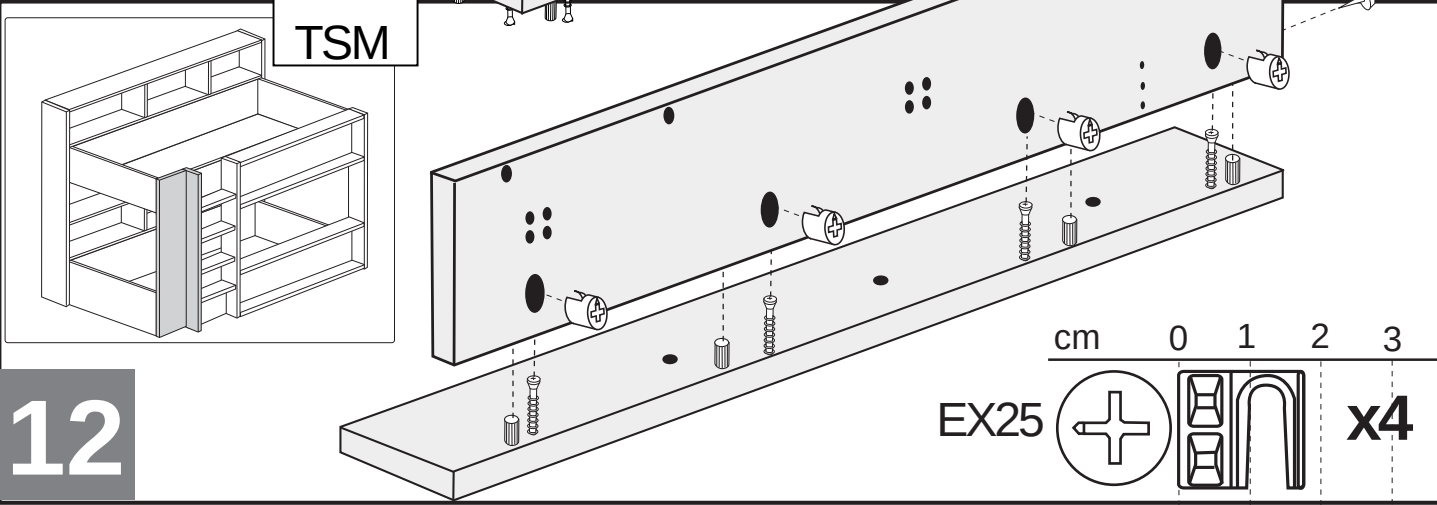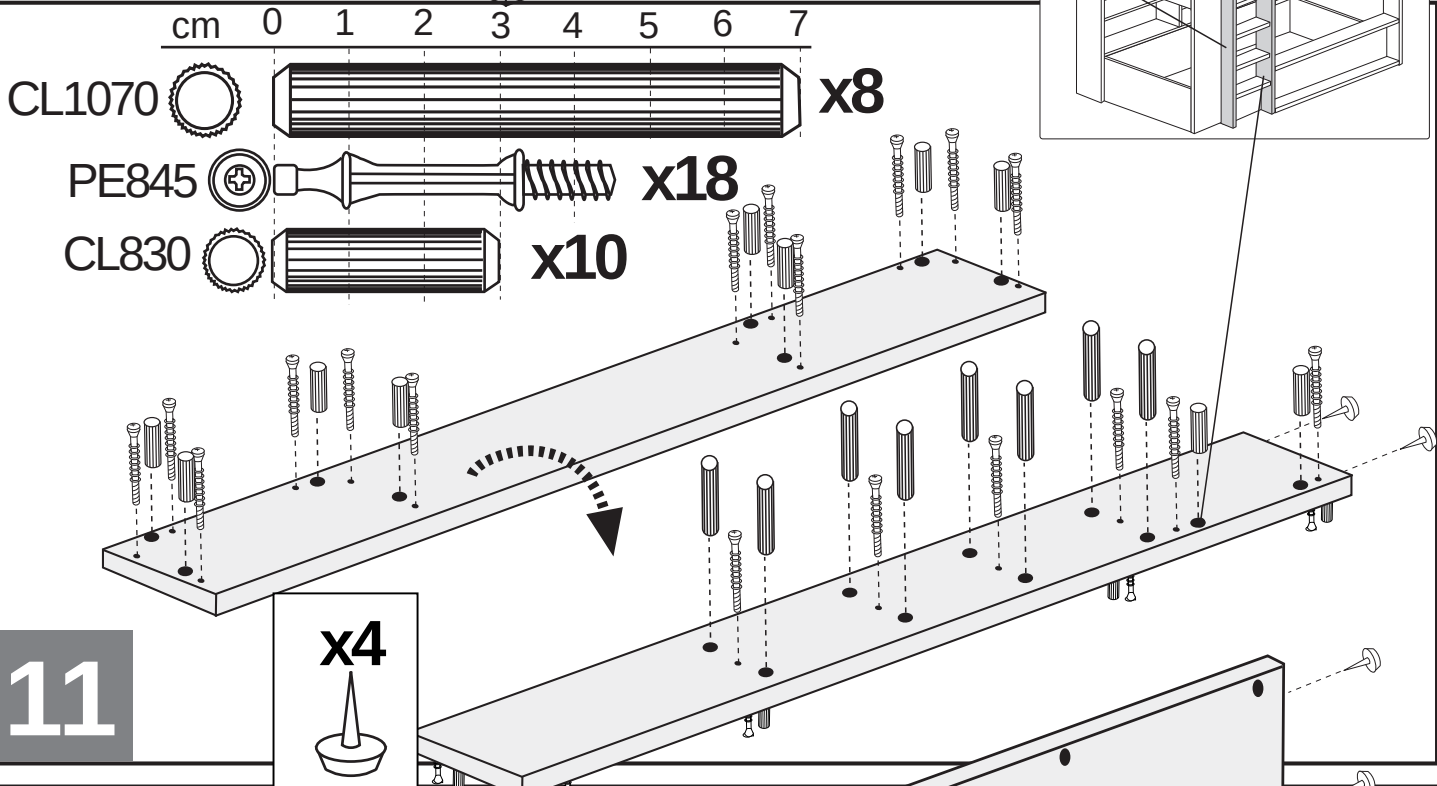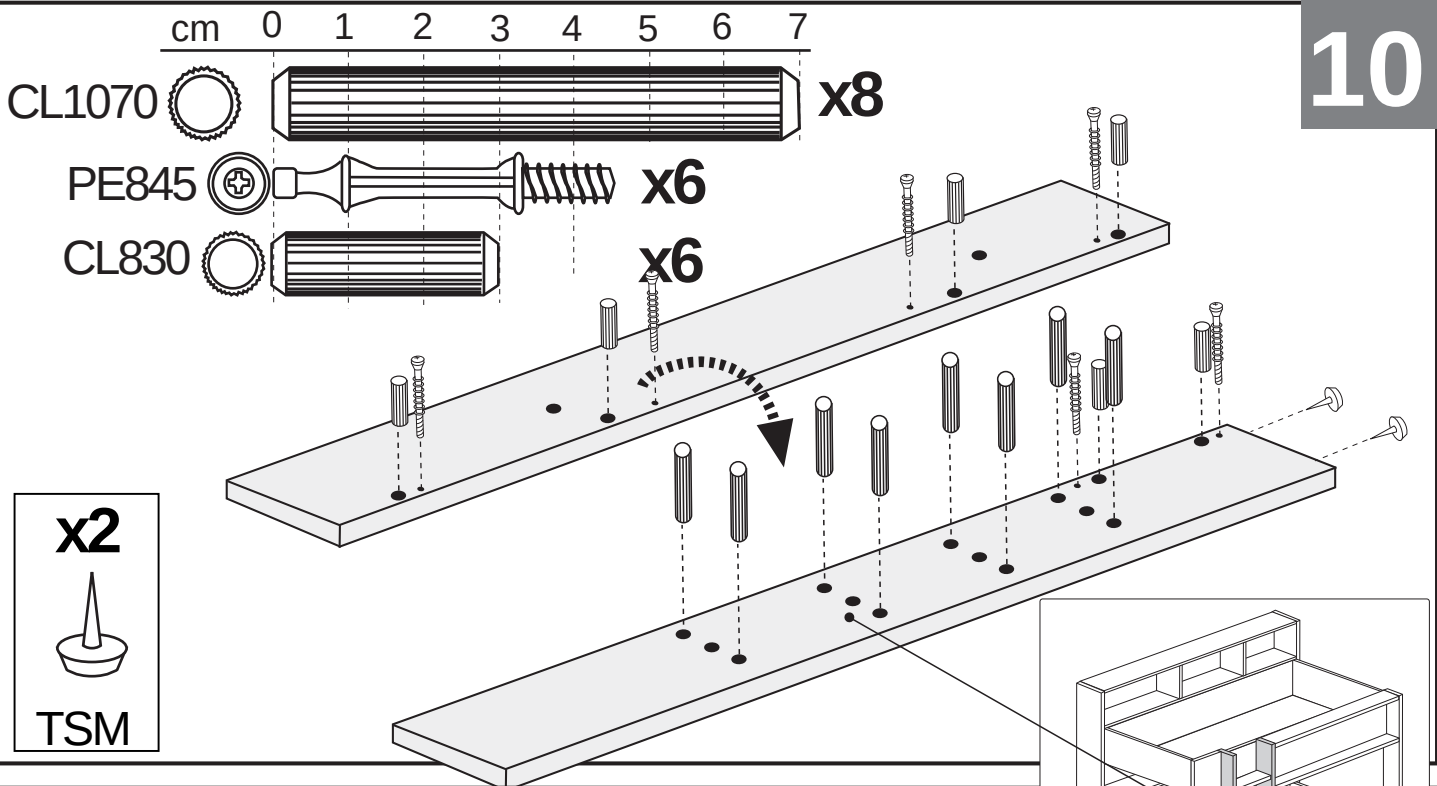


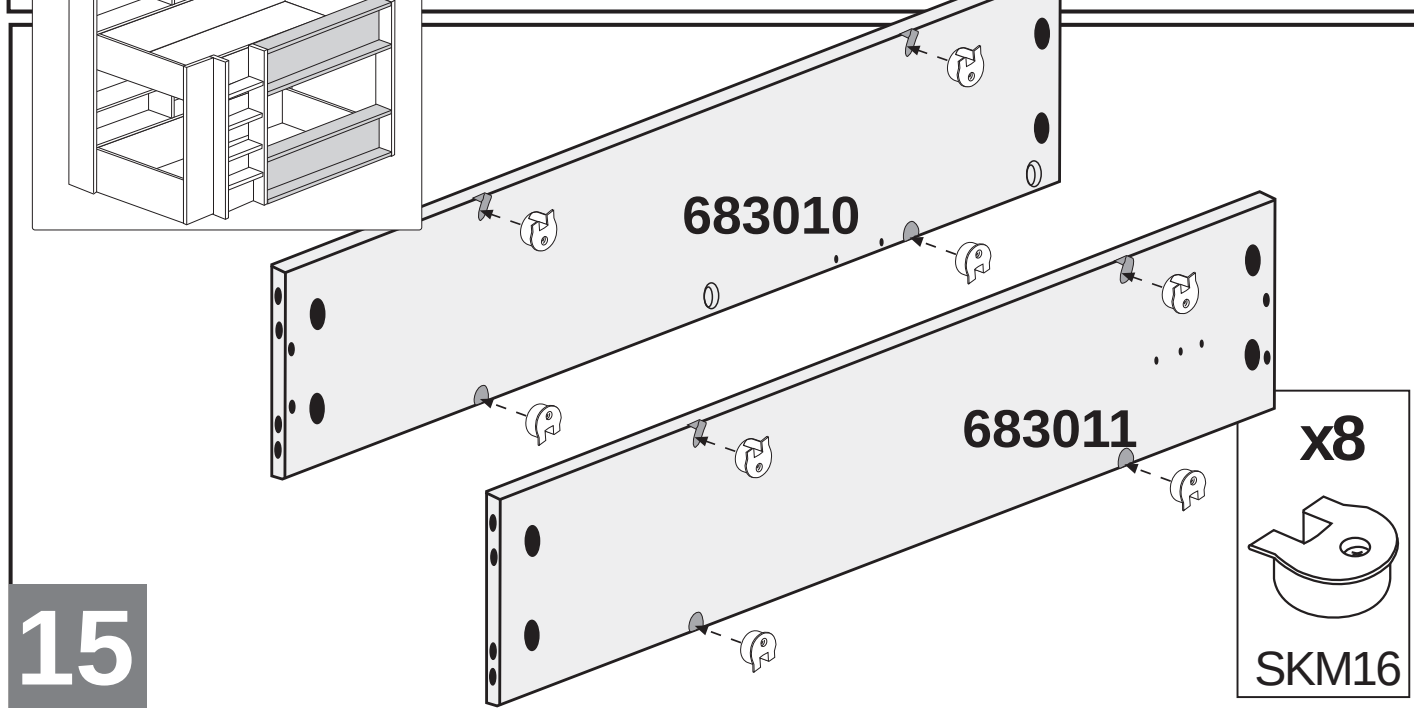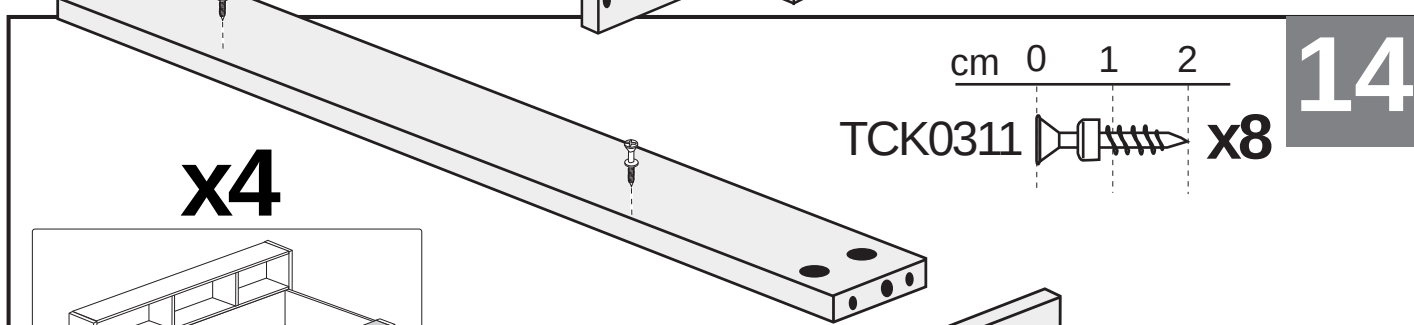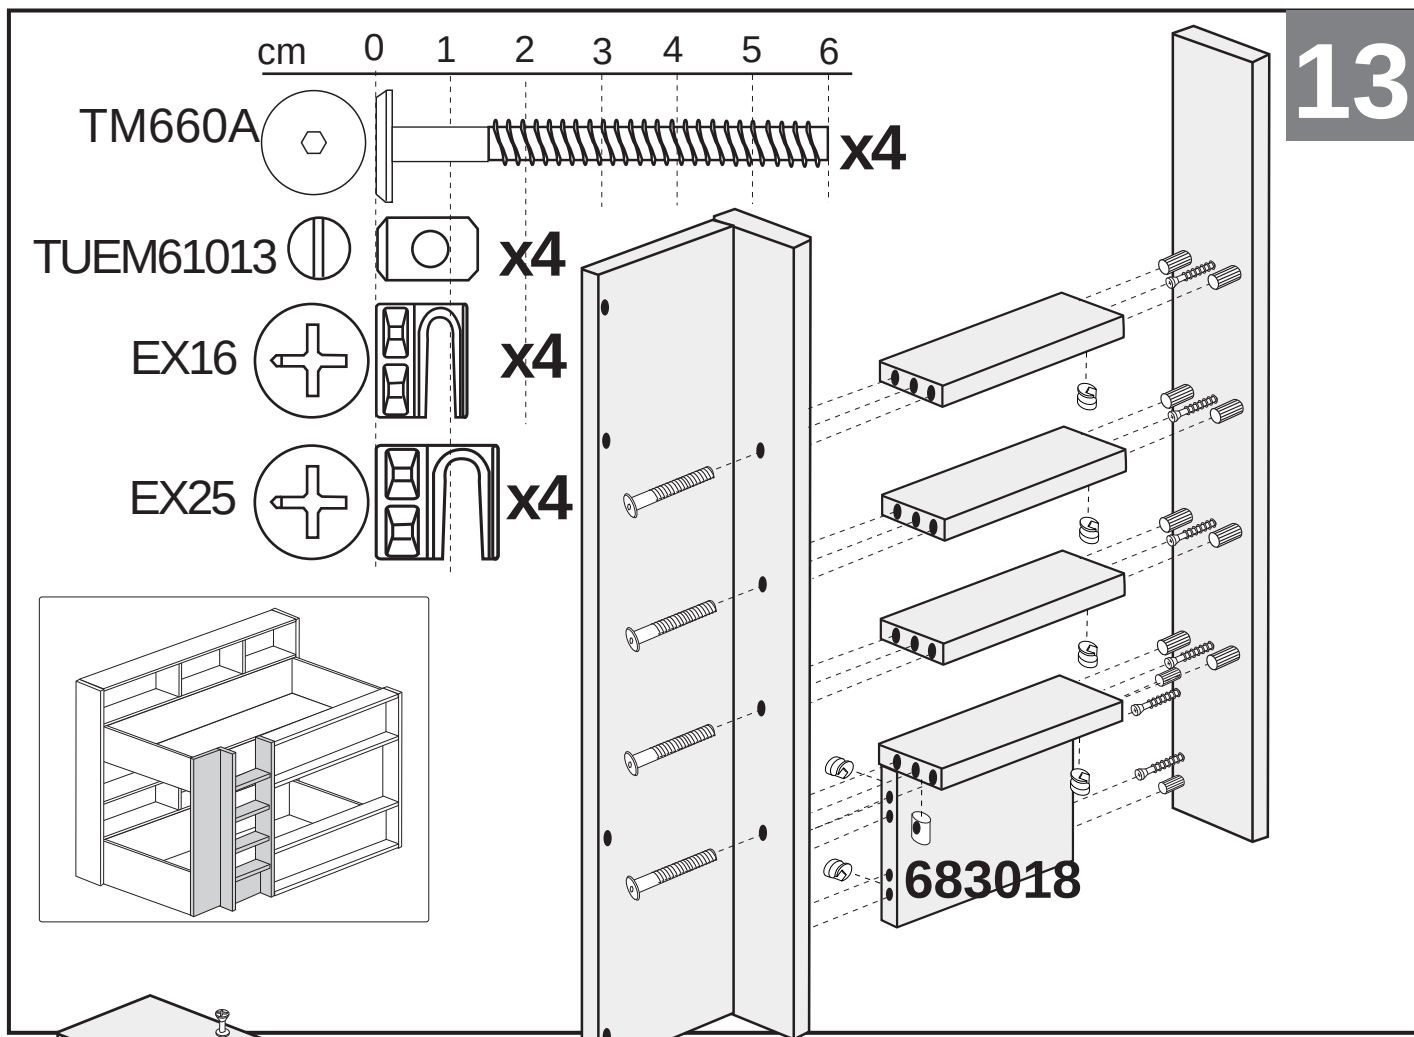

16

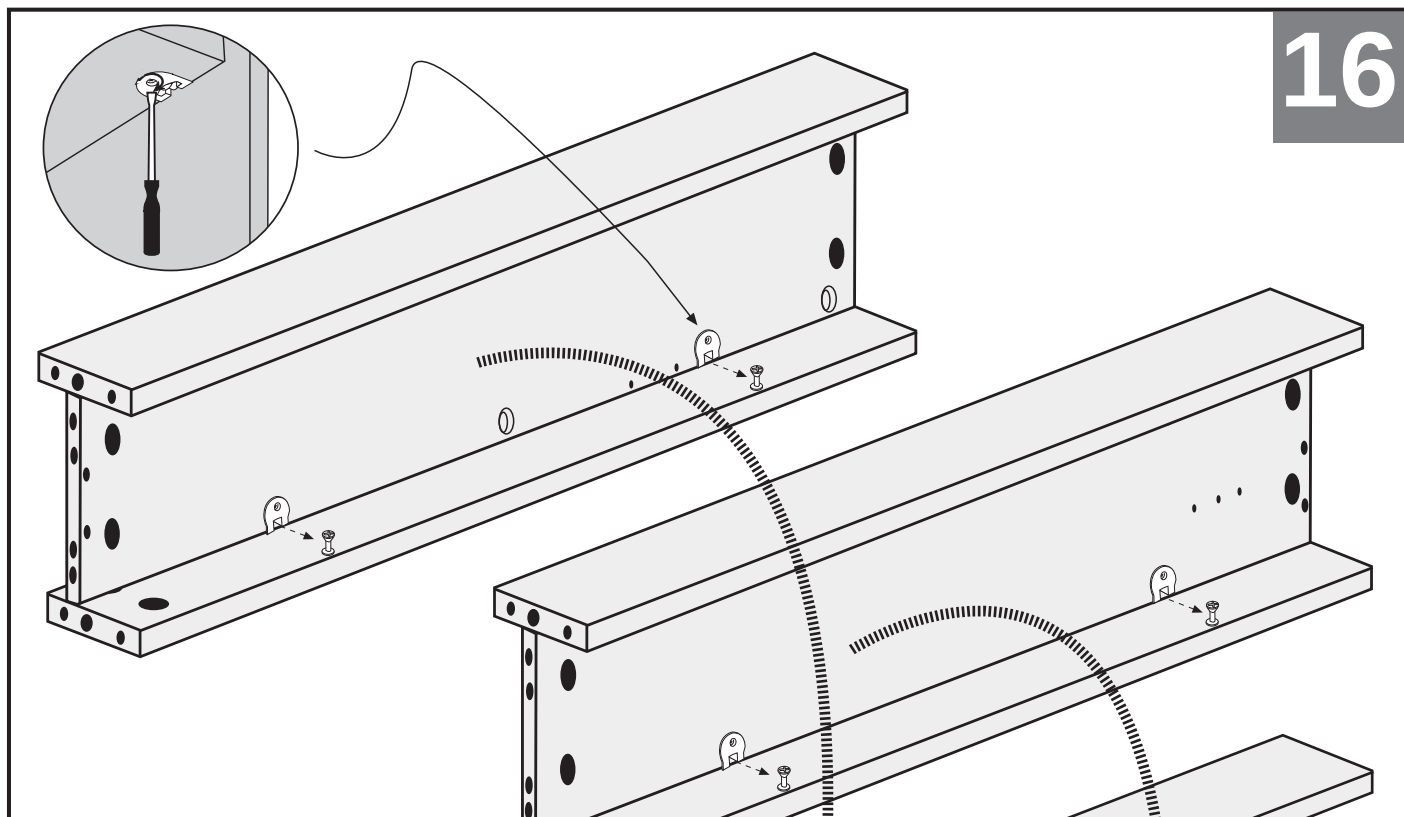


17

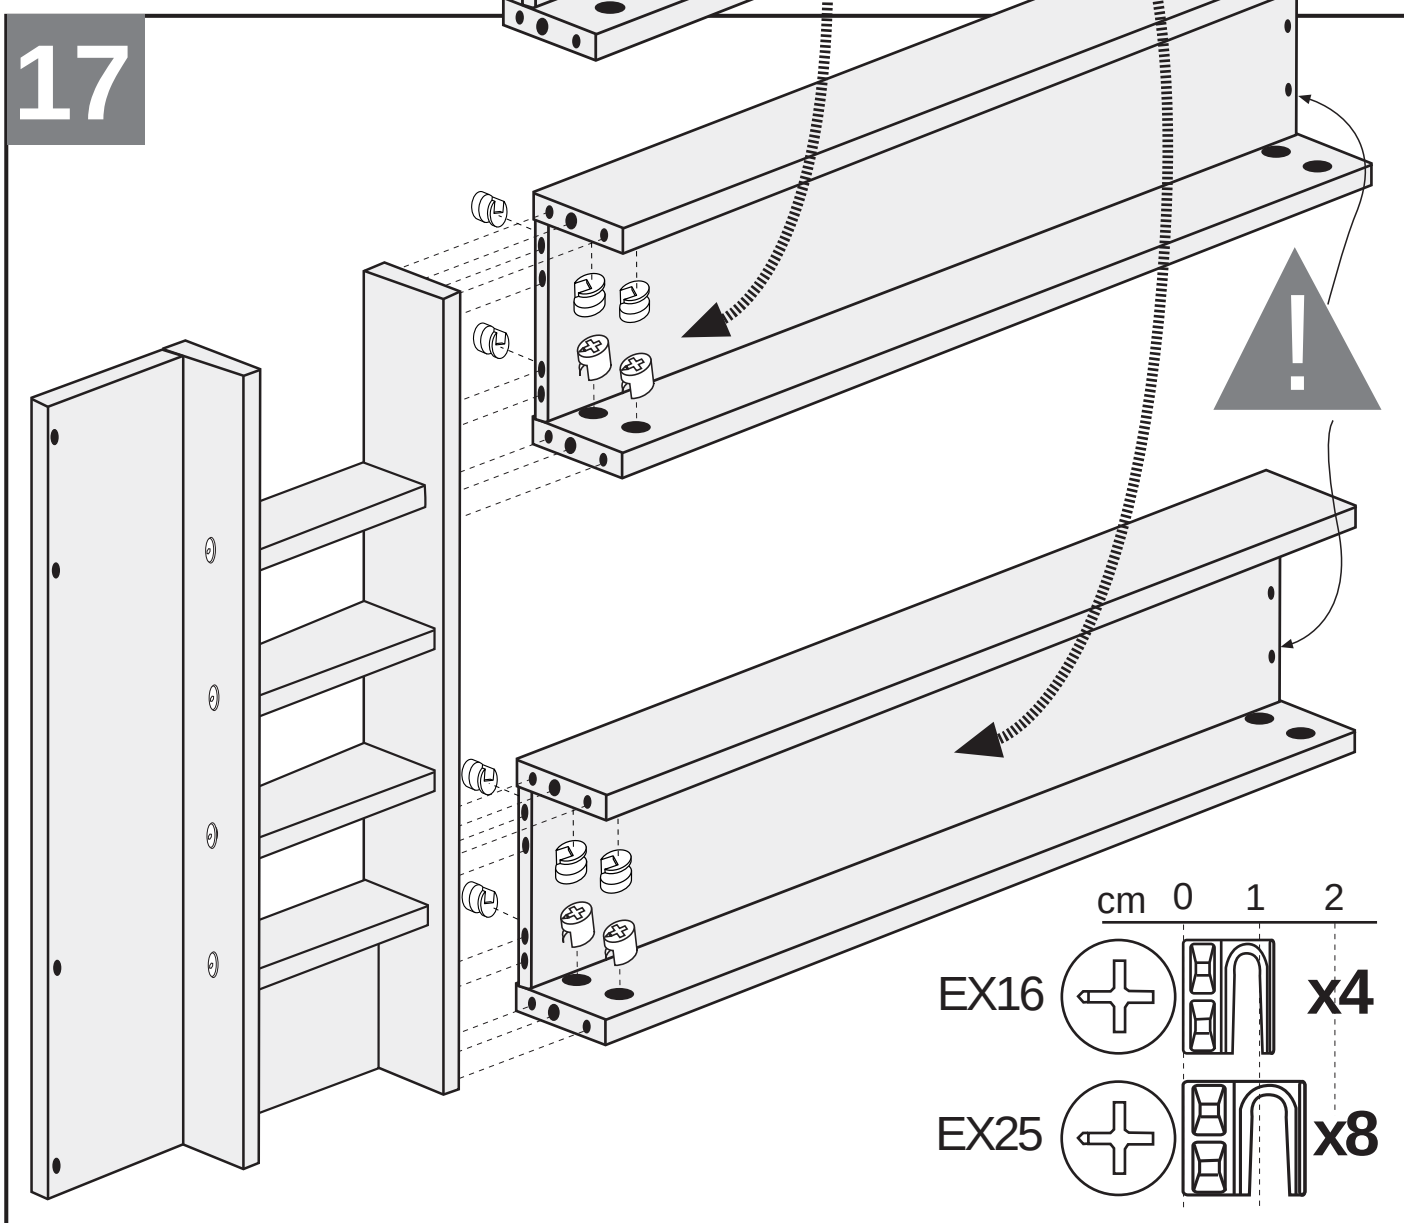

cm 0 1 2 3 4 5

PE845                     



20

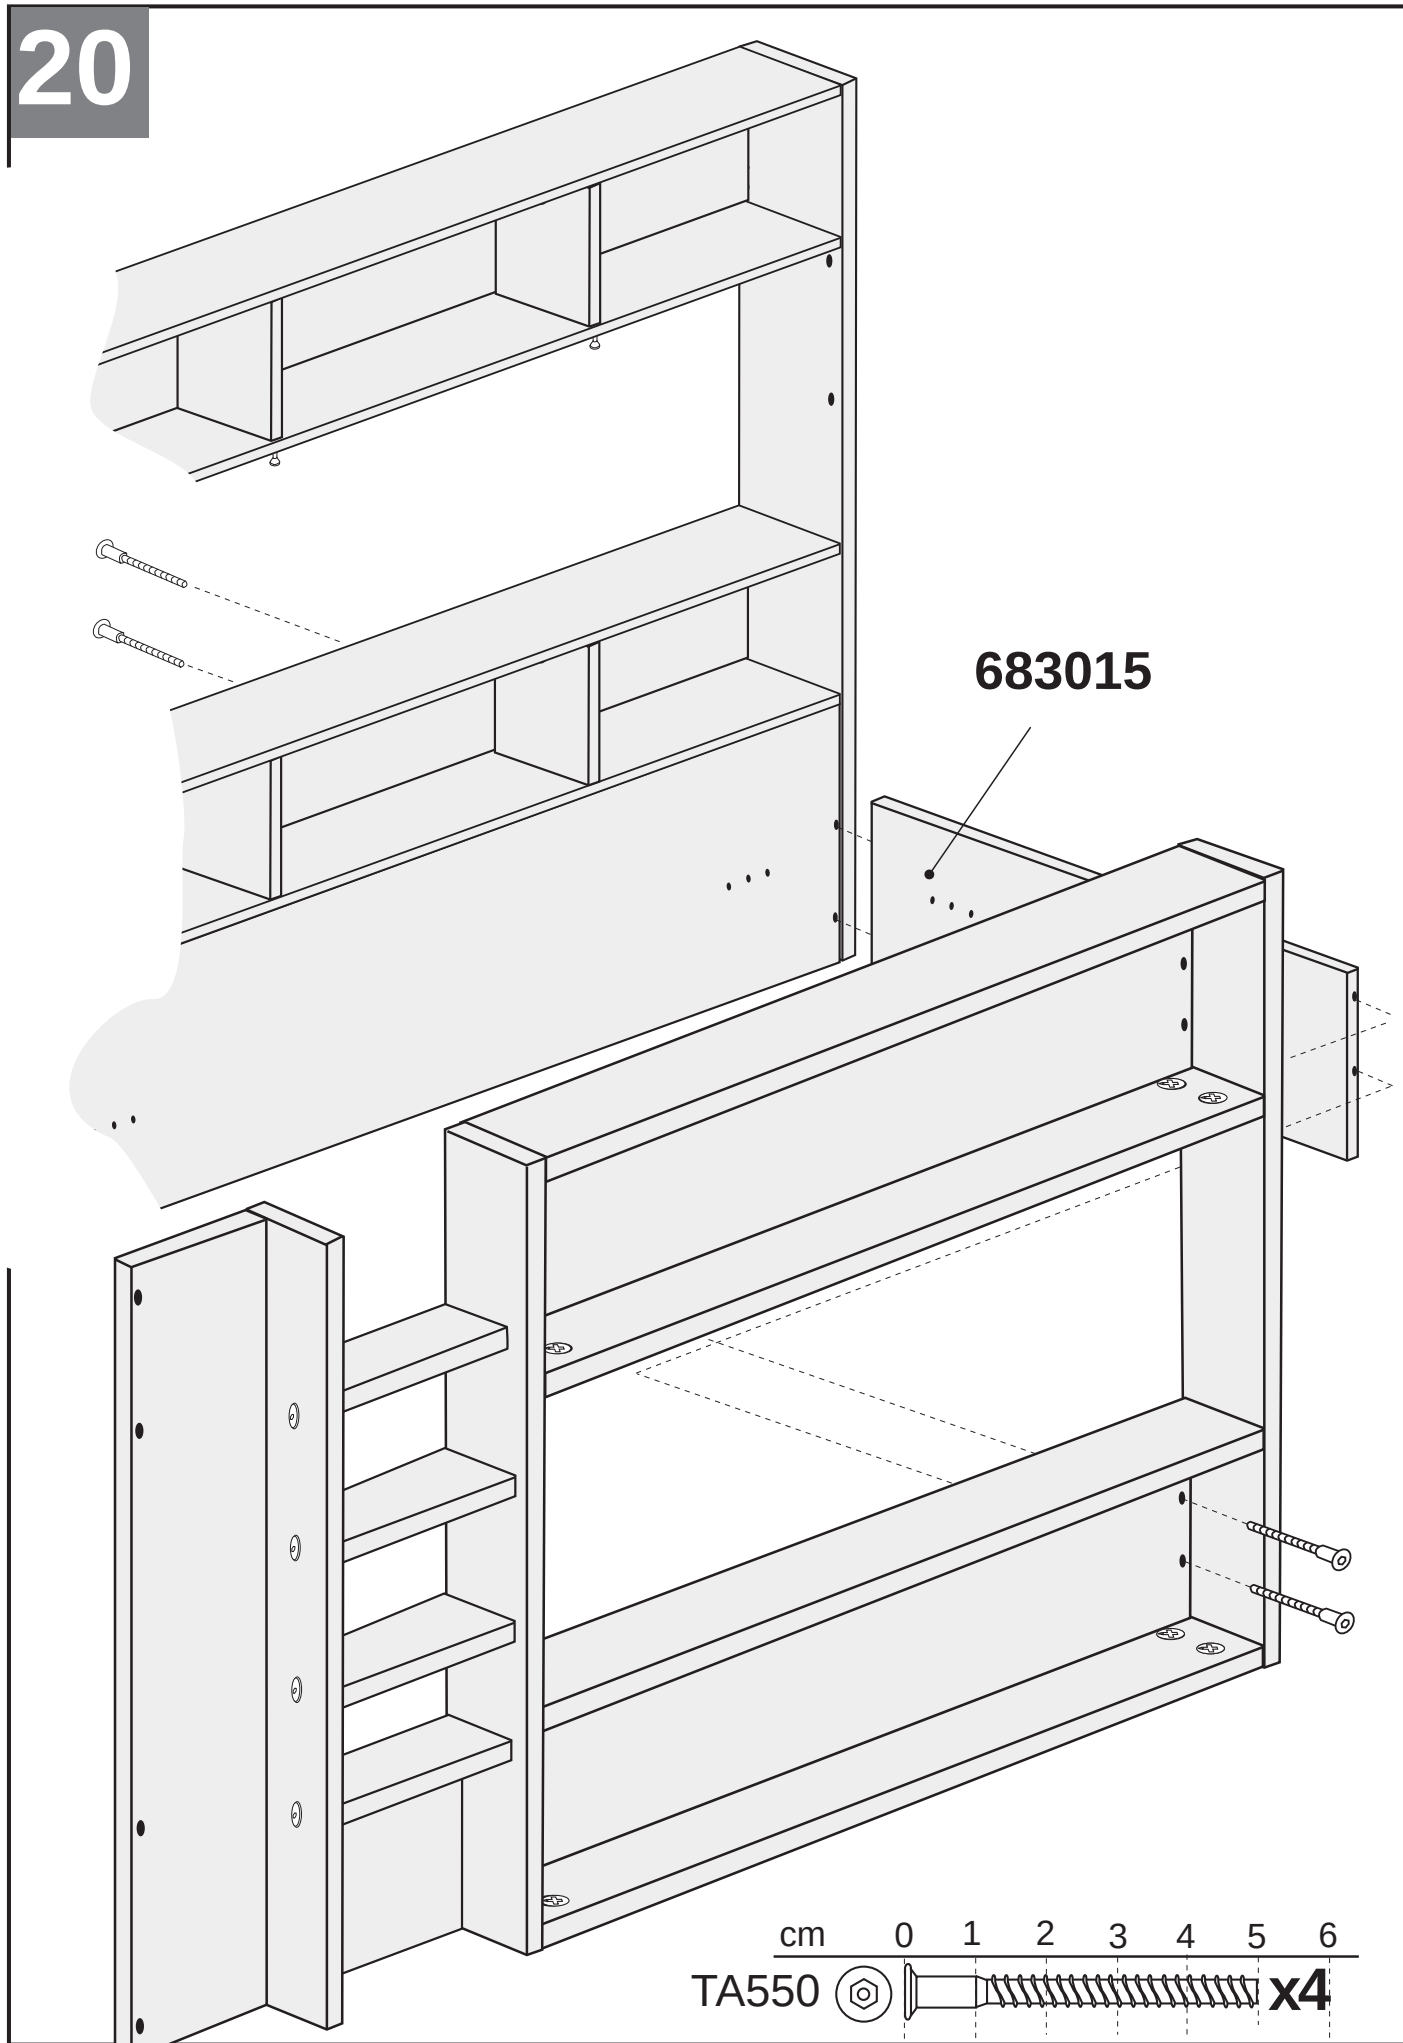

21


cm 0 1 2 3 4 5 6

TM660A



x2

TA550




x3


TUEM61013



x2

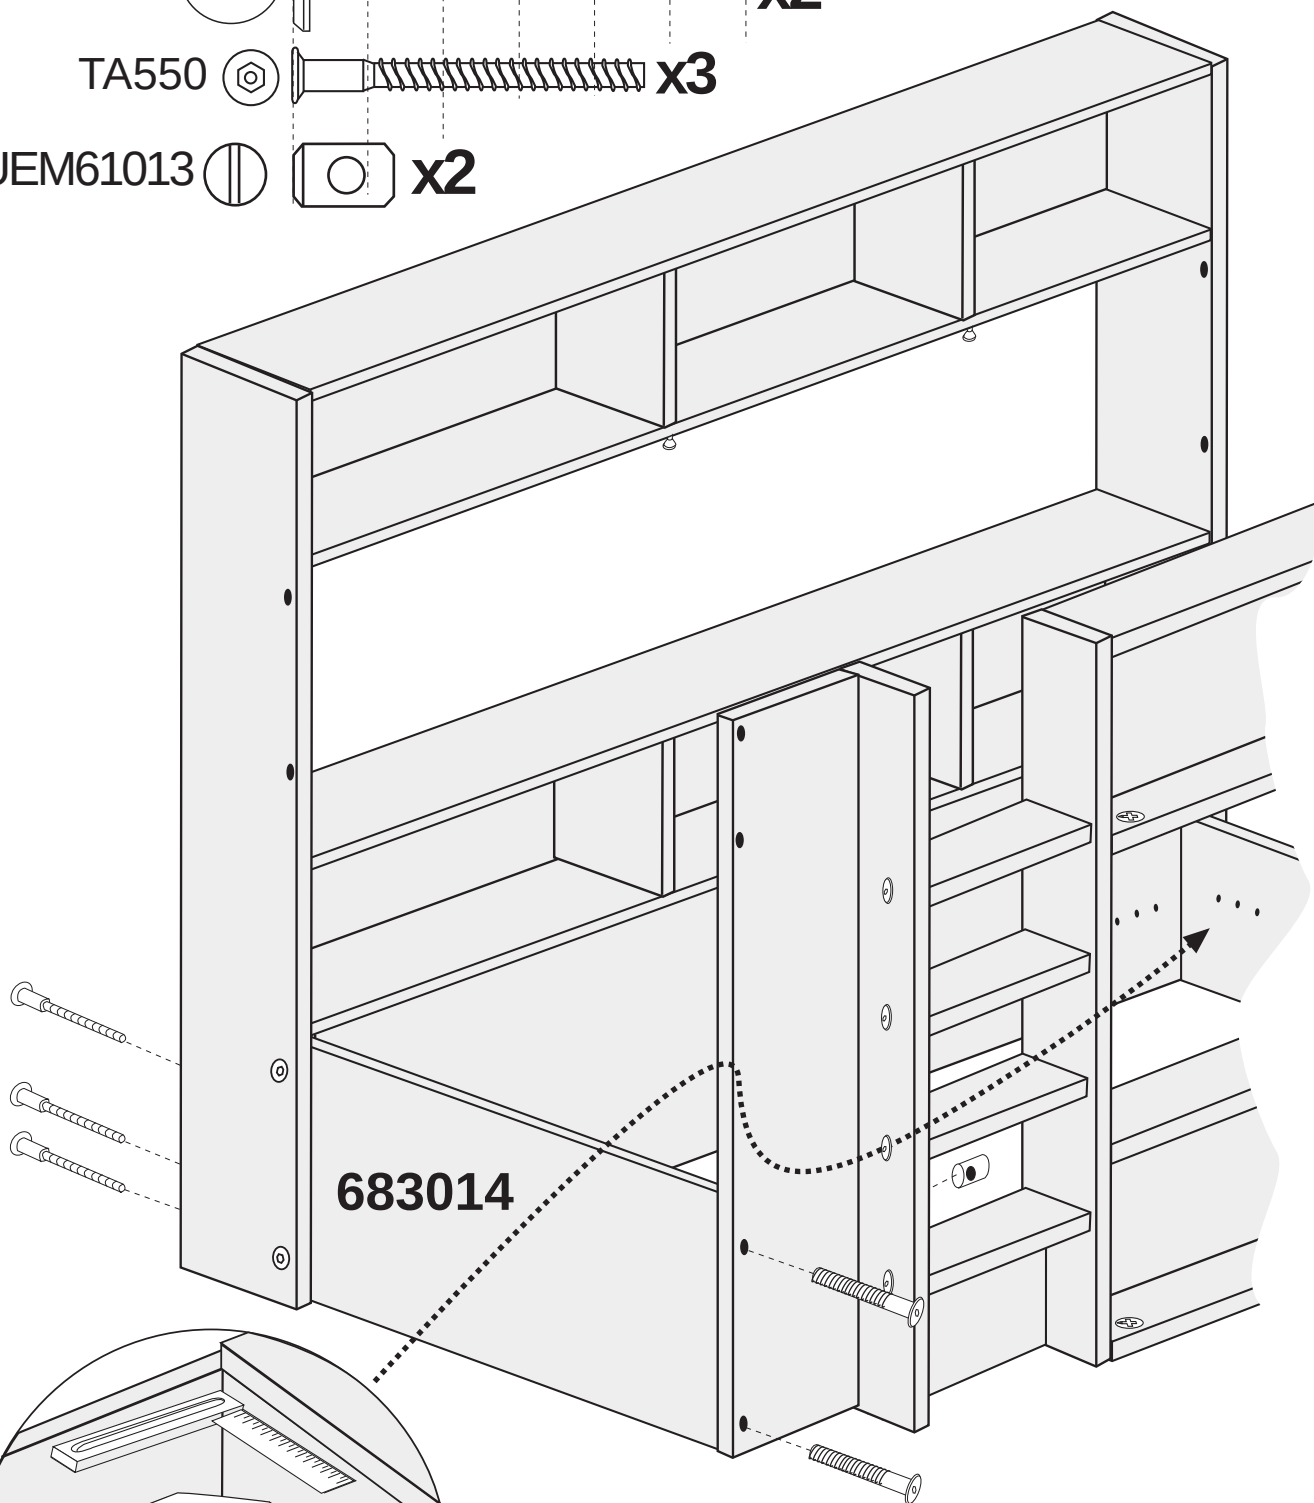

683014

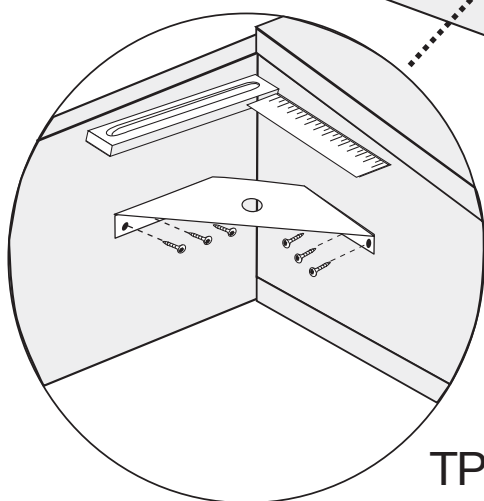


cm 0 1

TP3515





x24

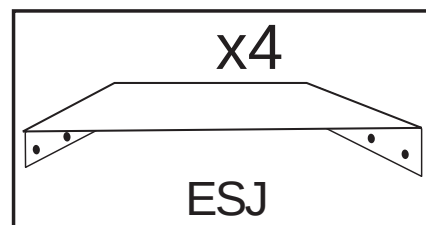


x4

ESJ

22

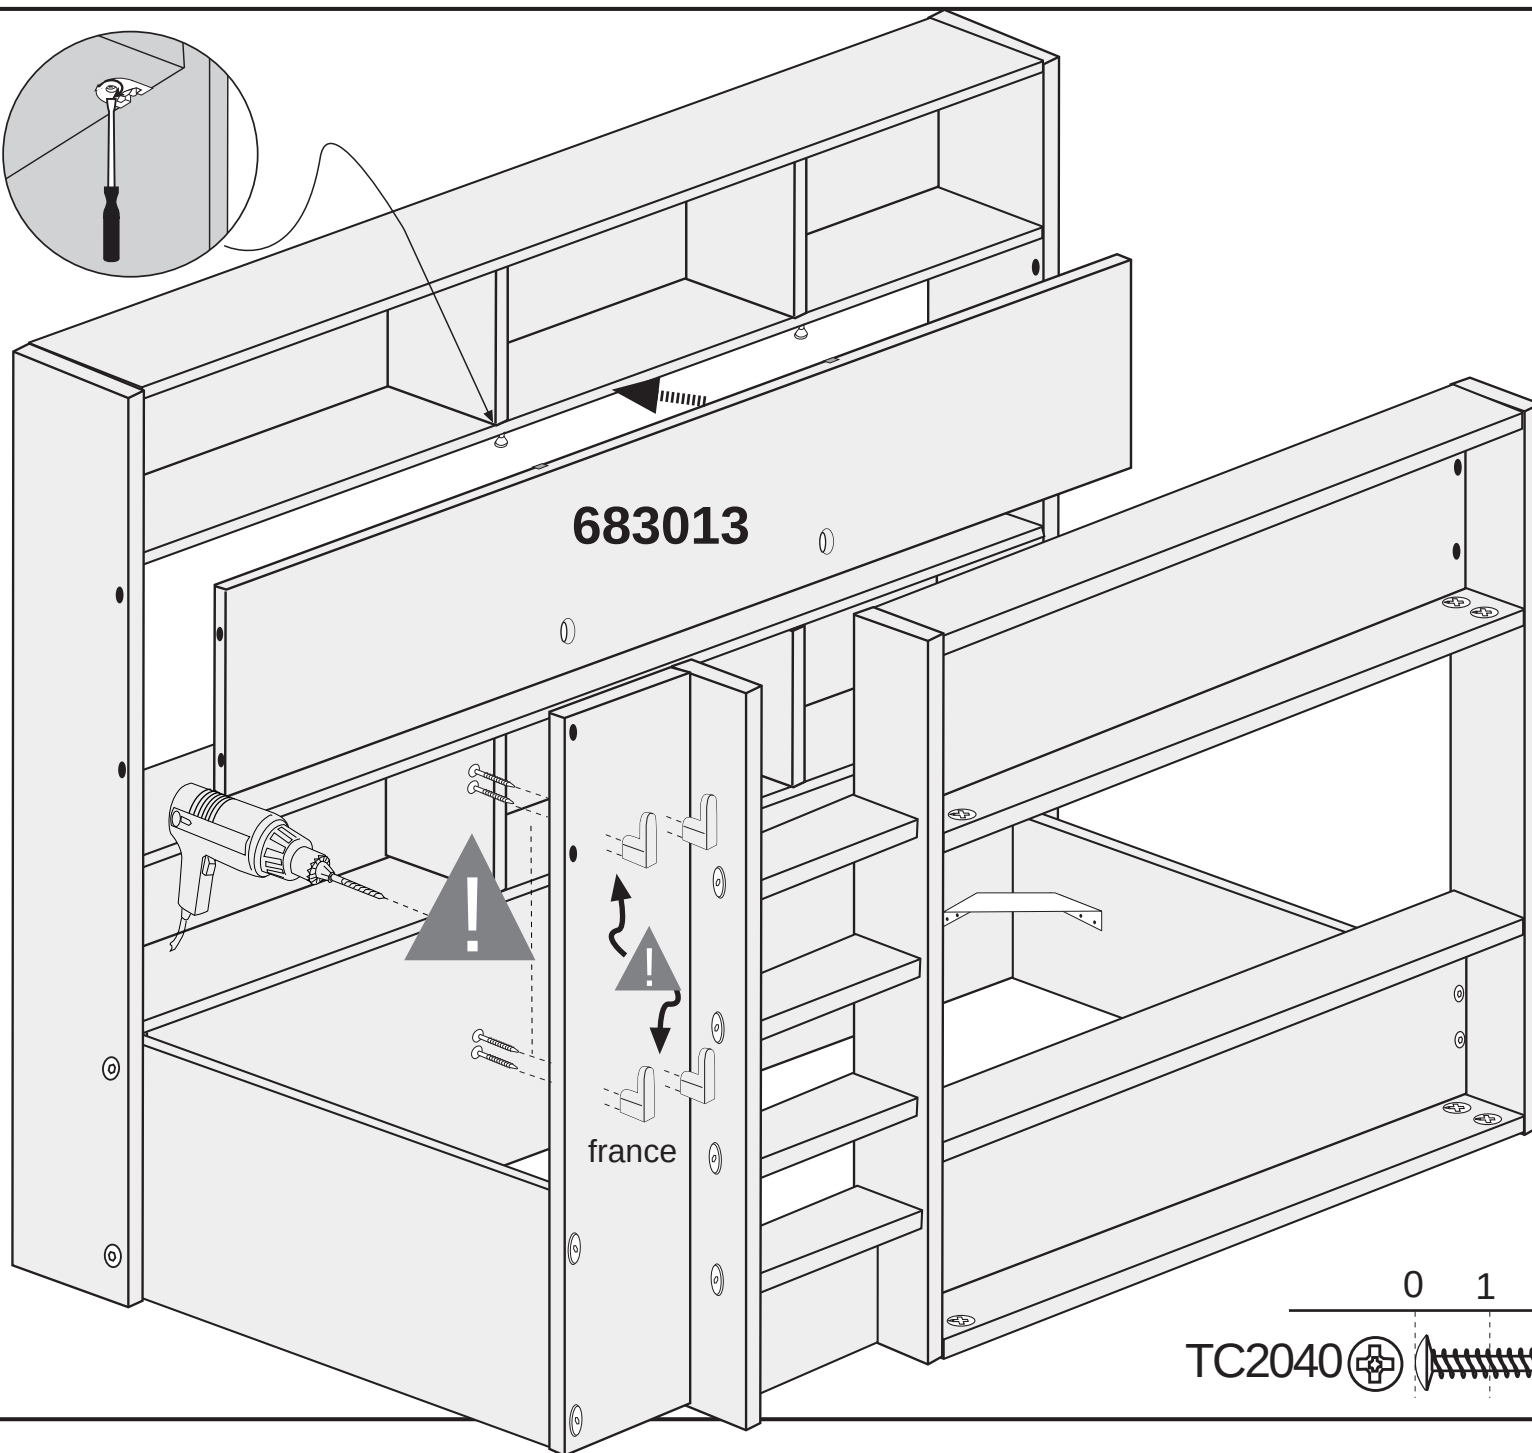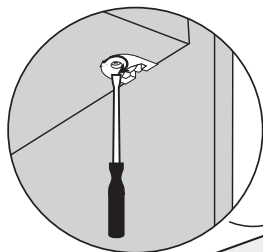



x2







PCBL


0 1 2 3 4
TC2040  x4

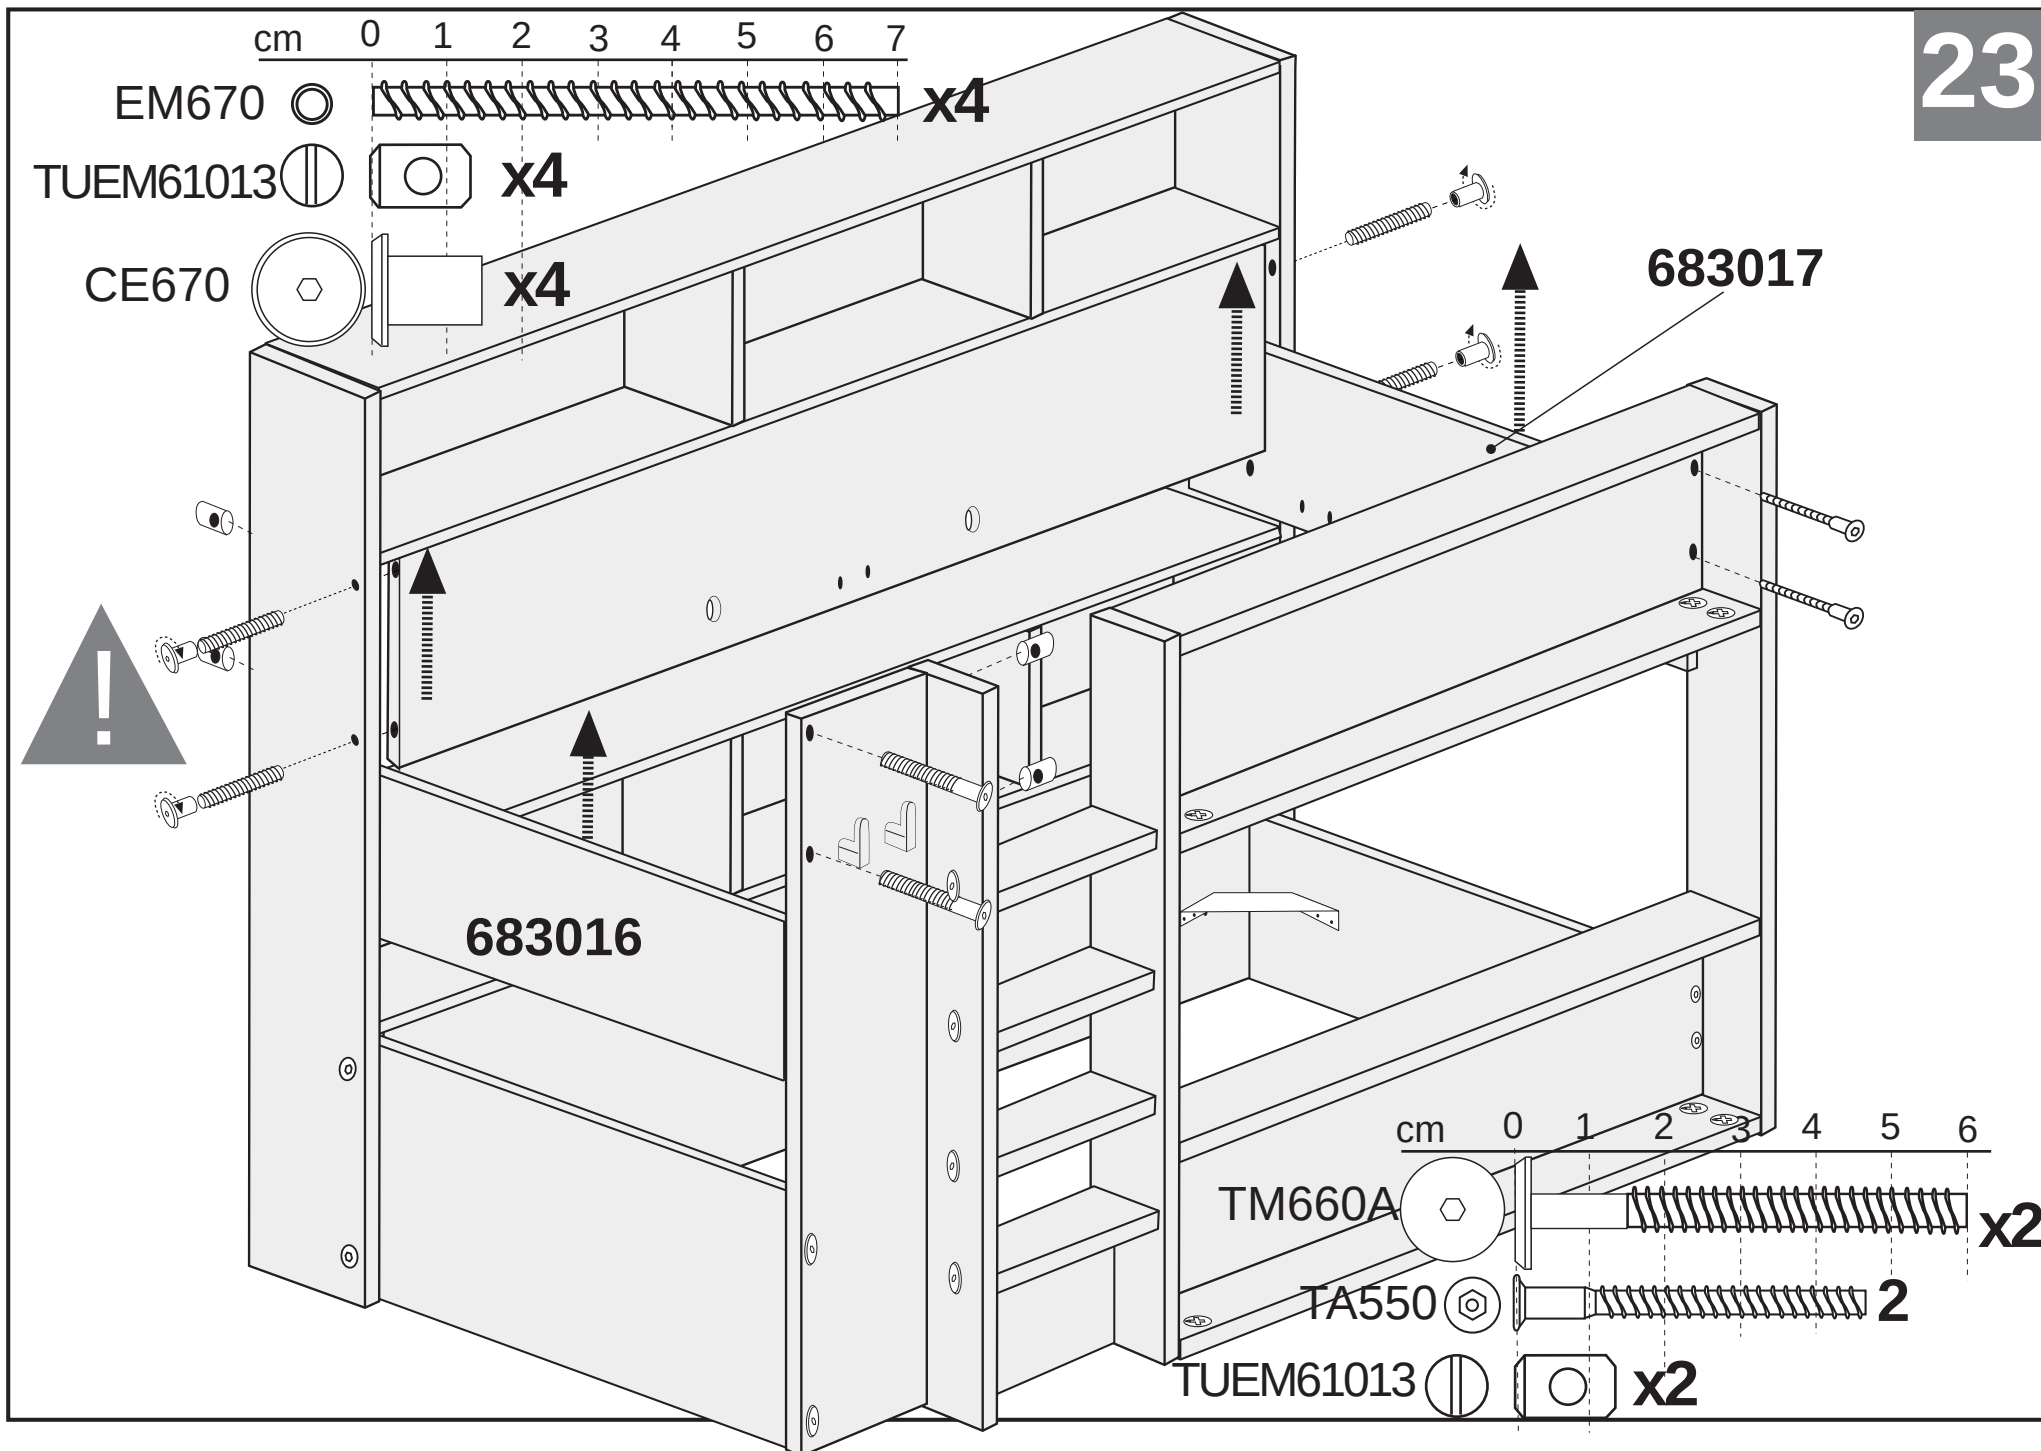

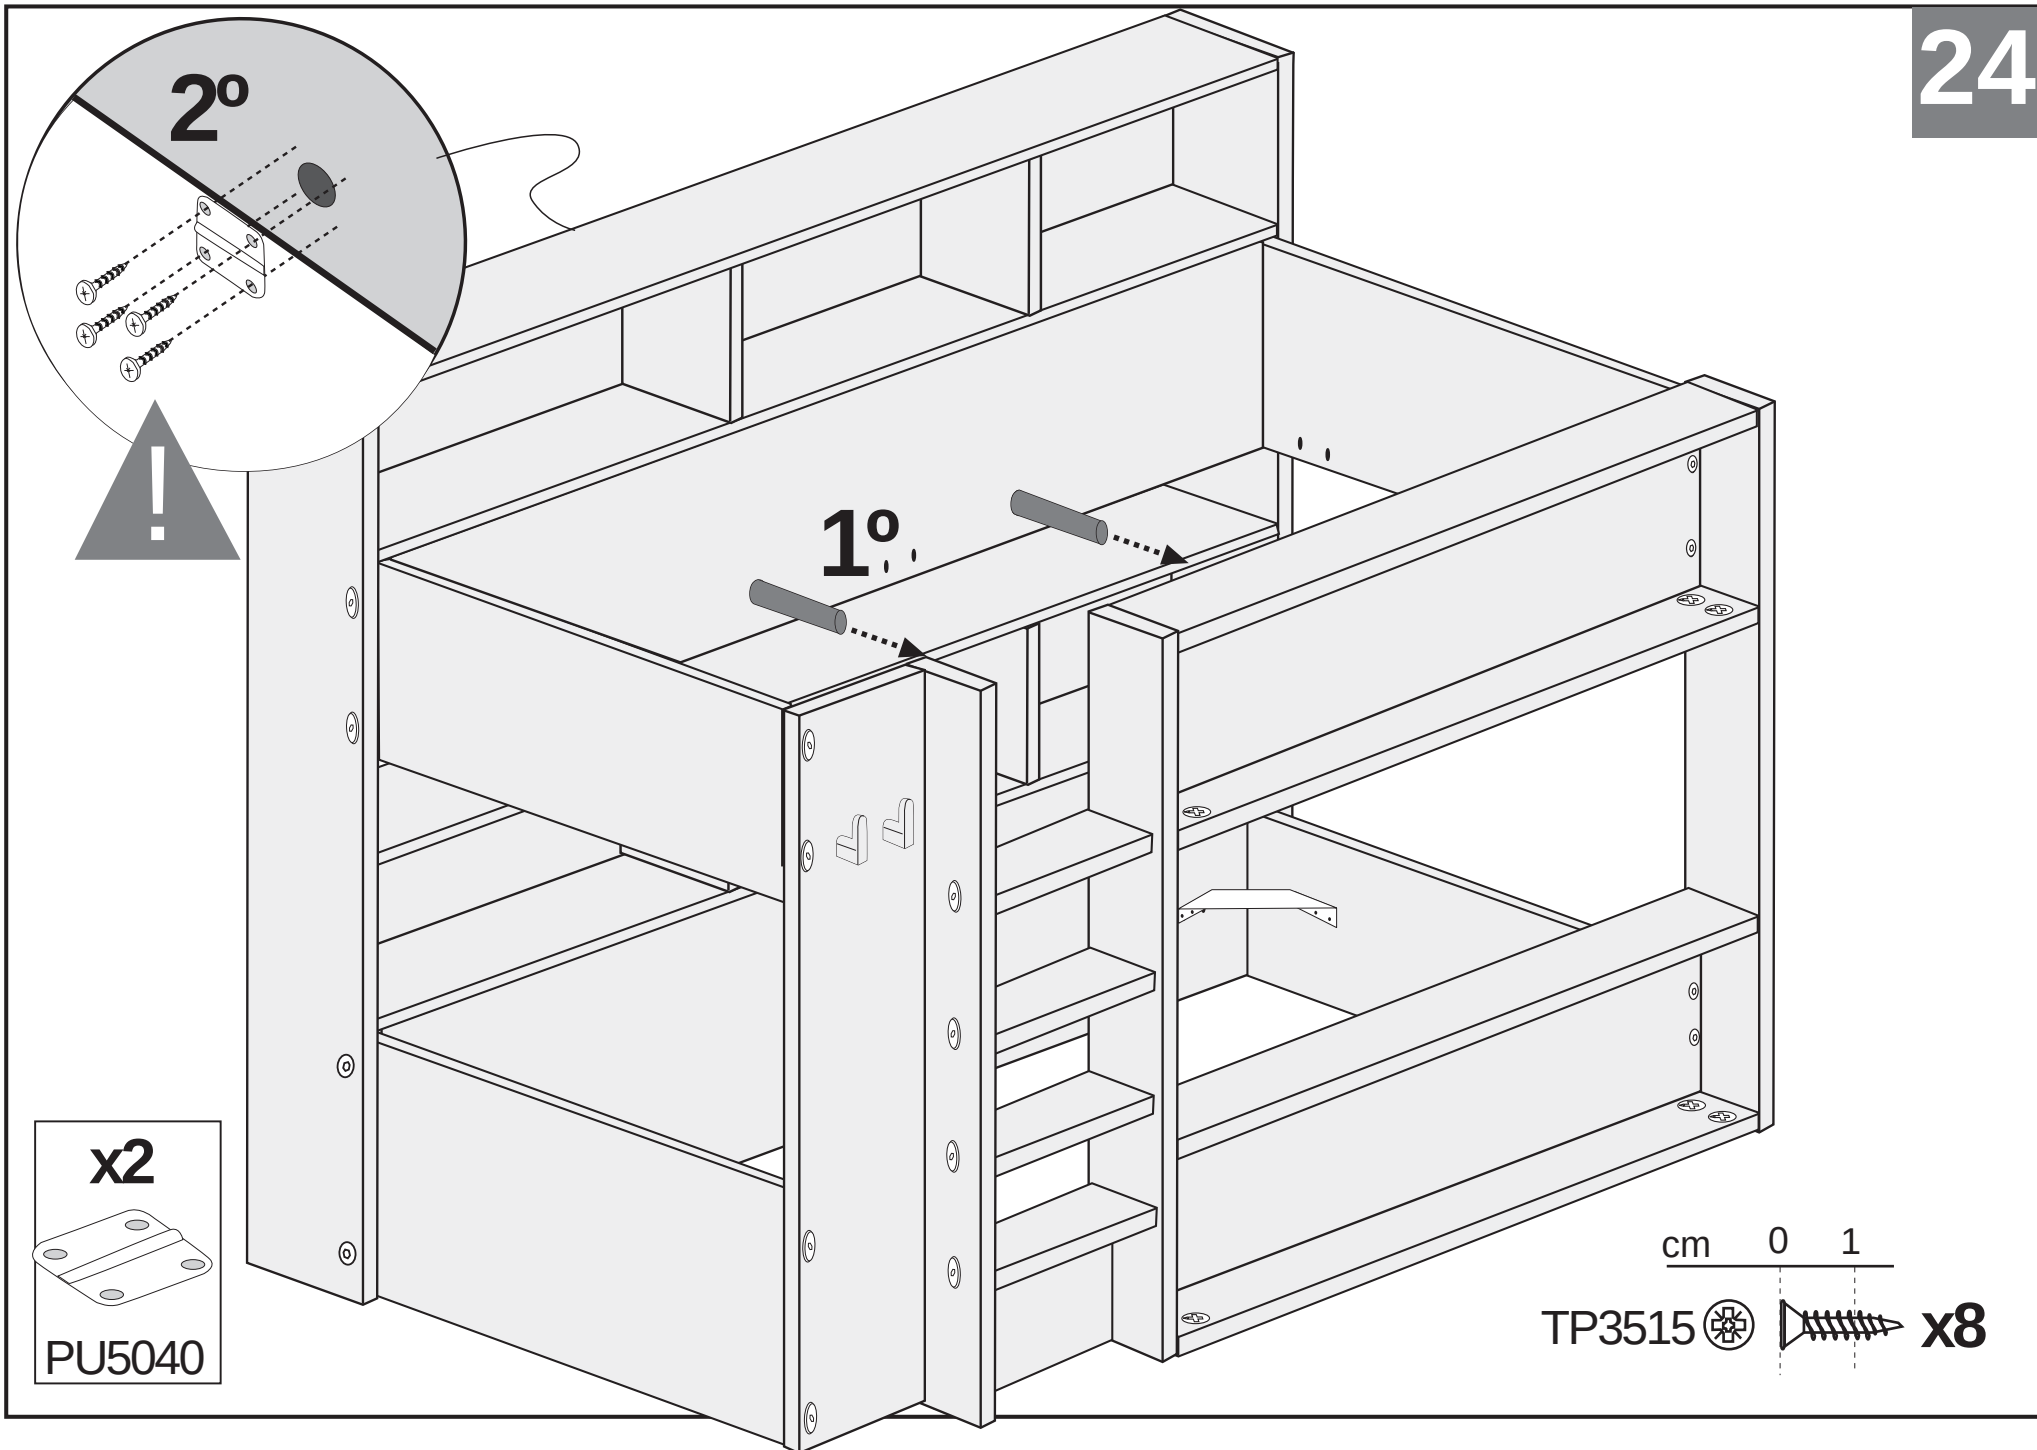

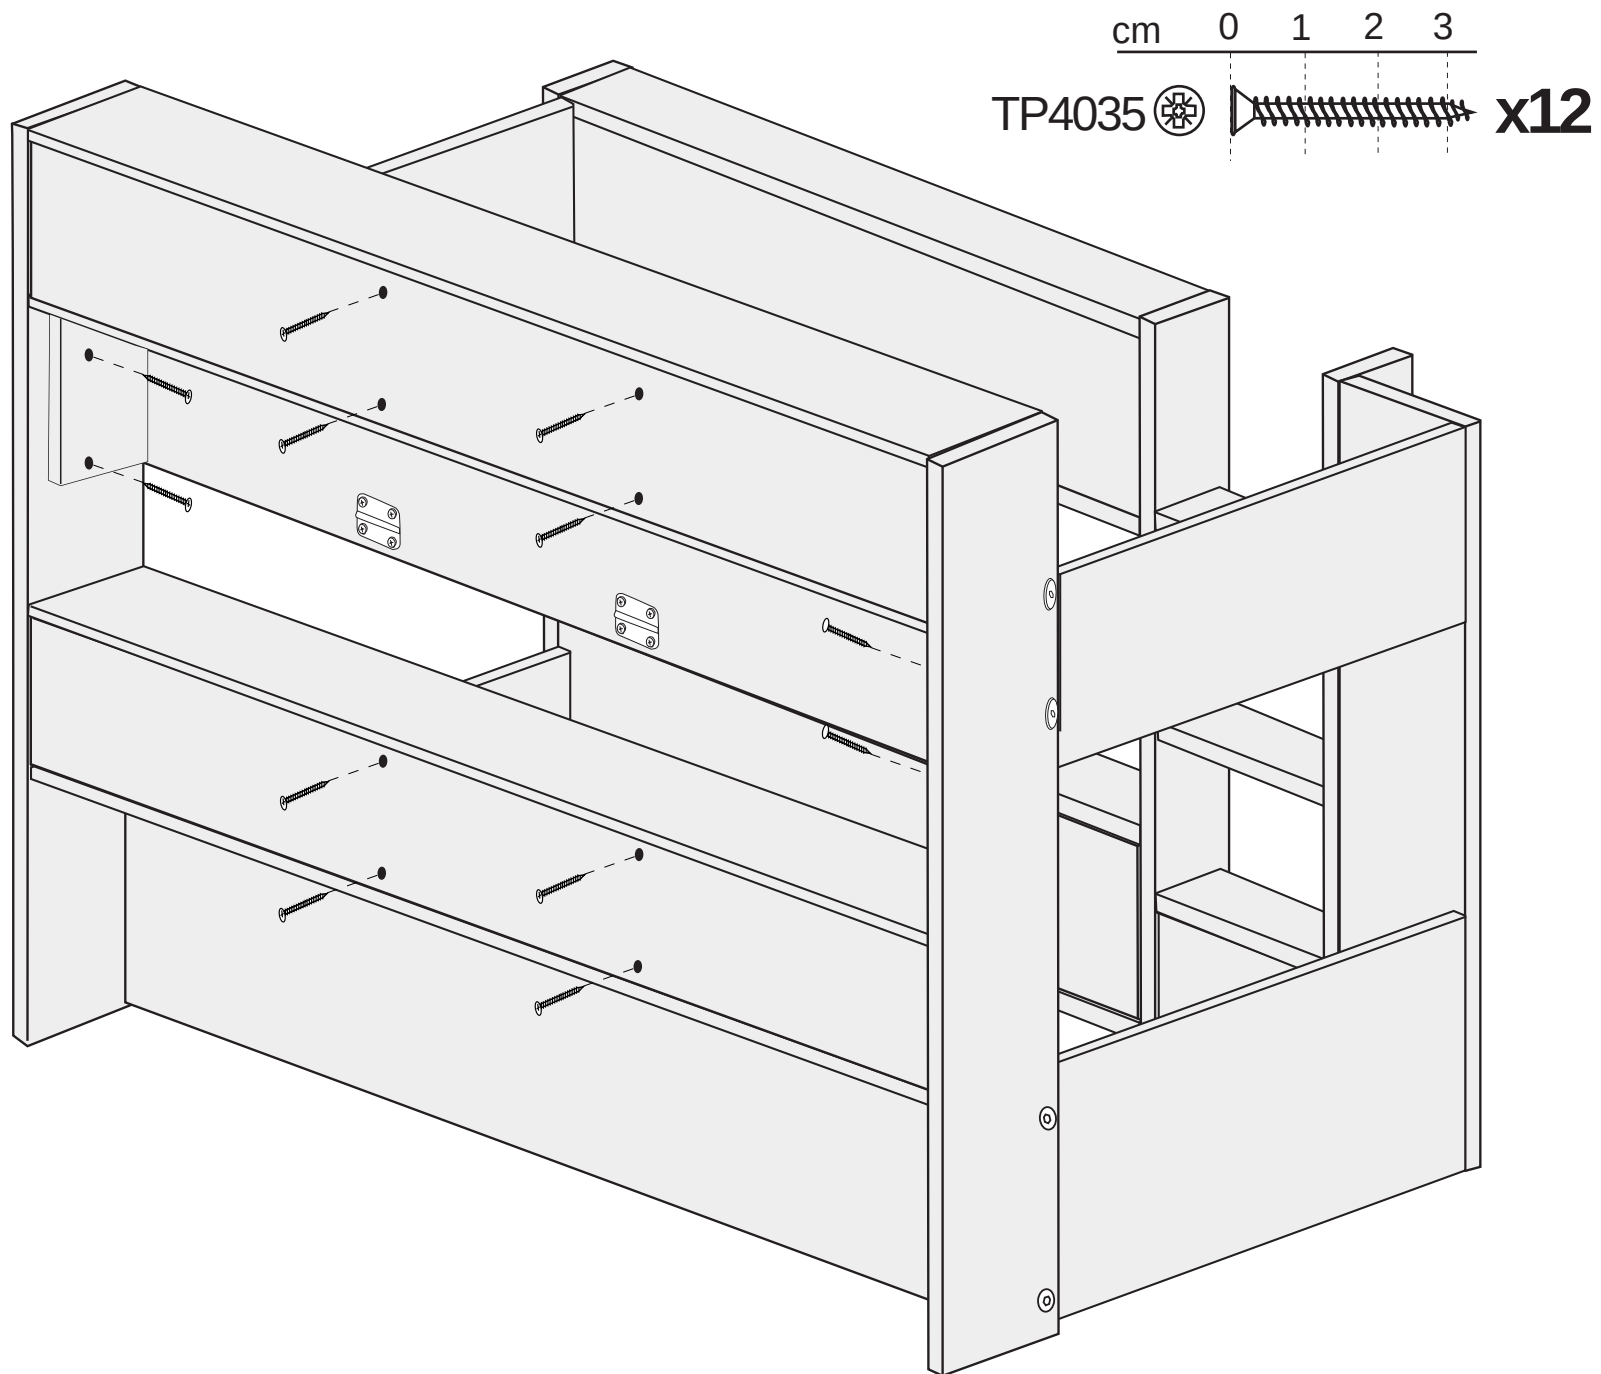

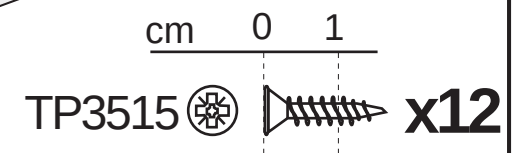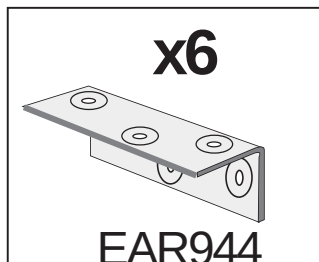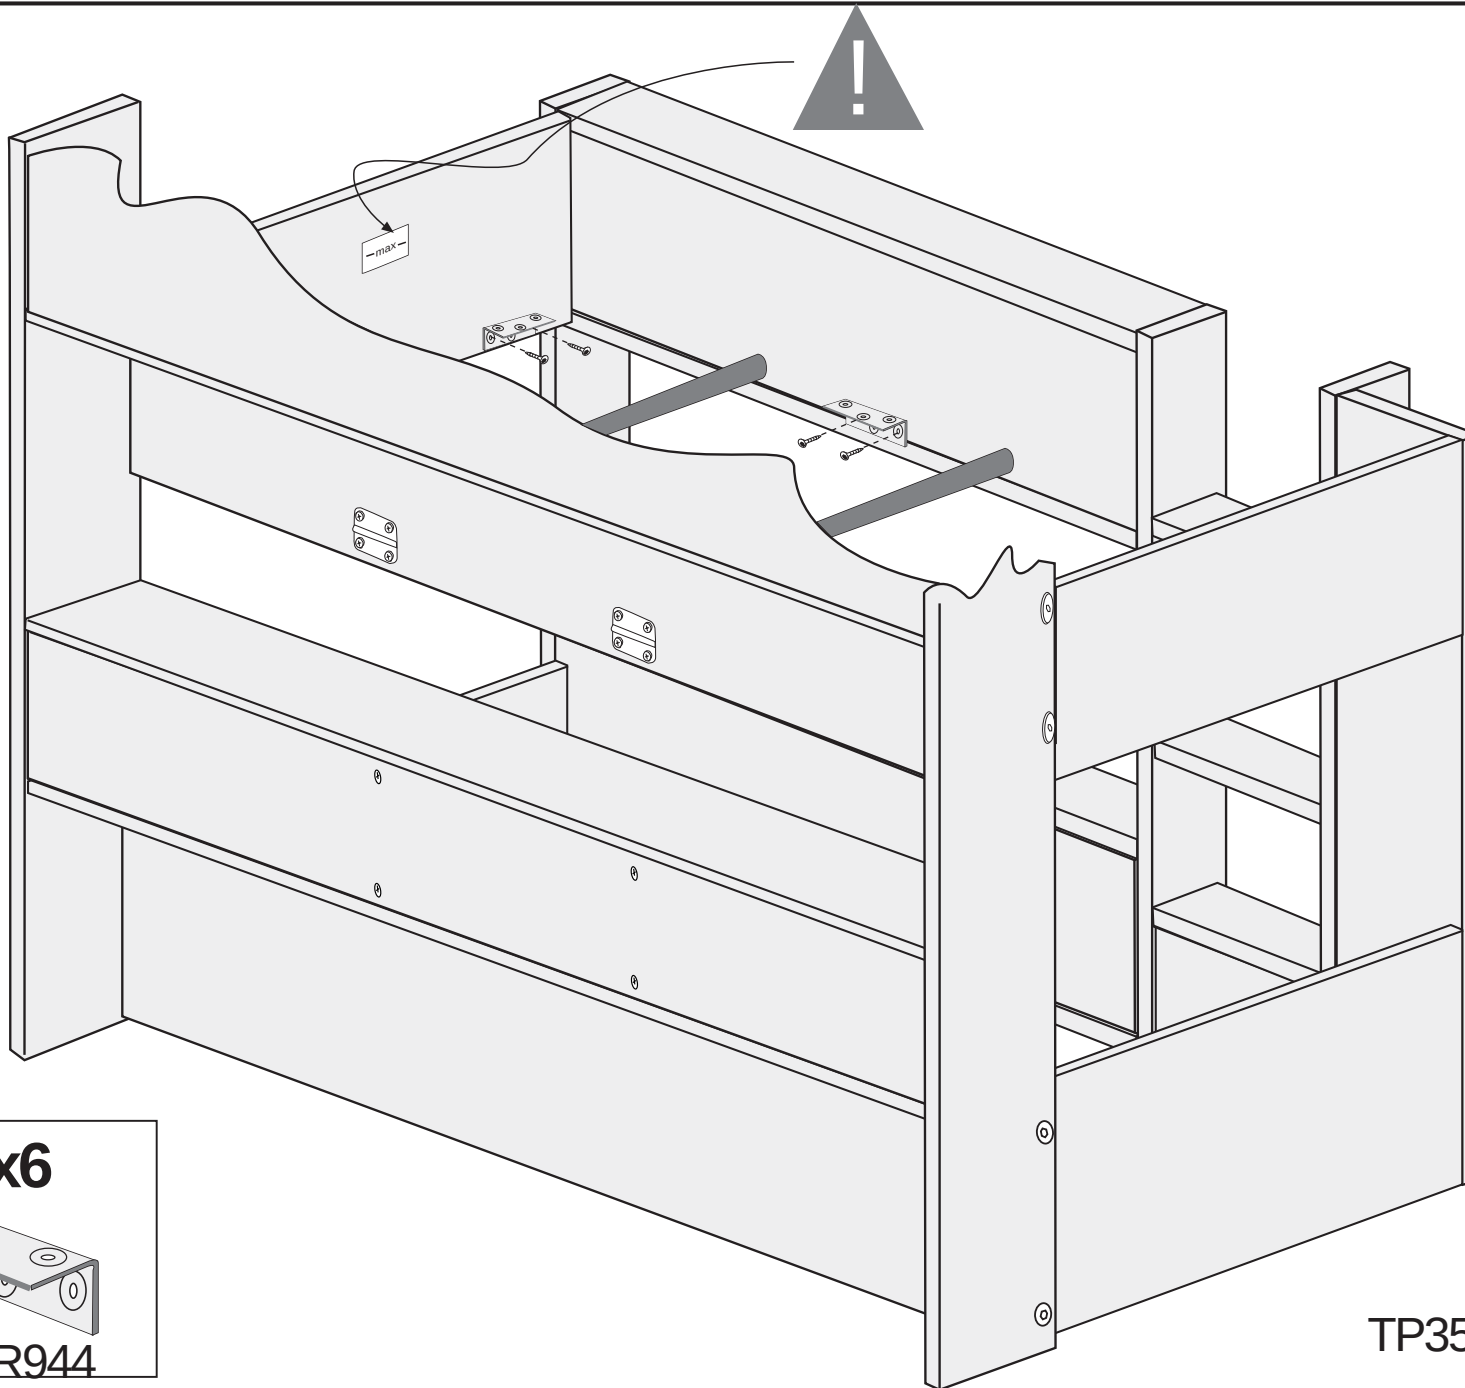

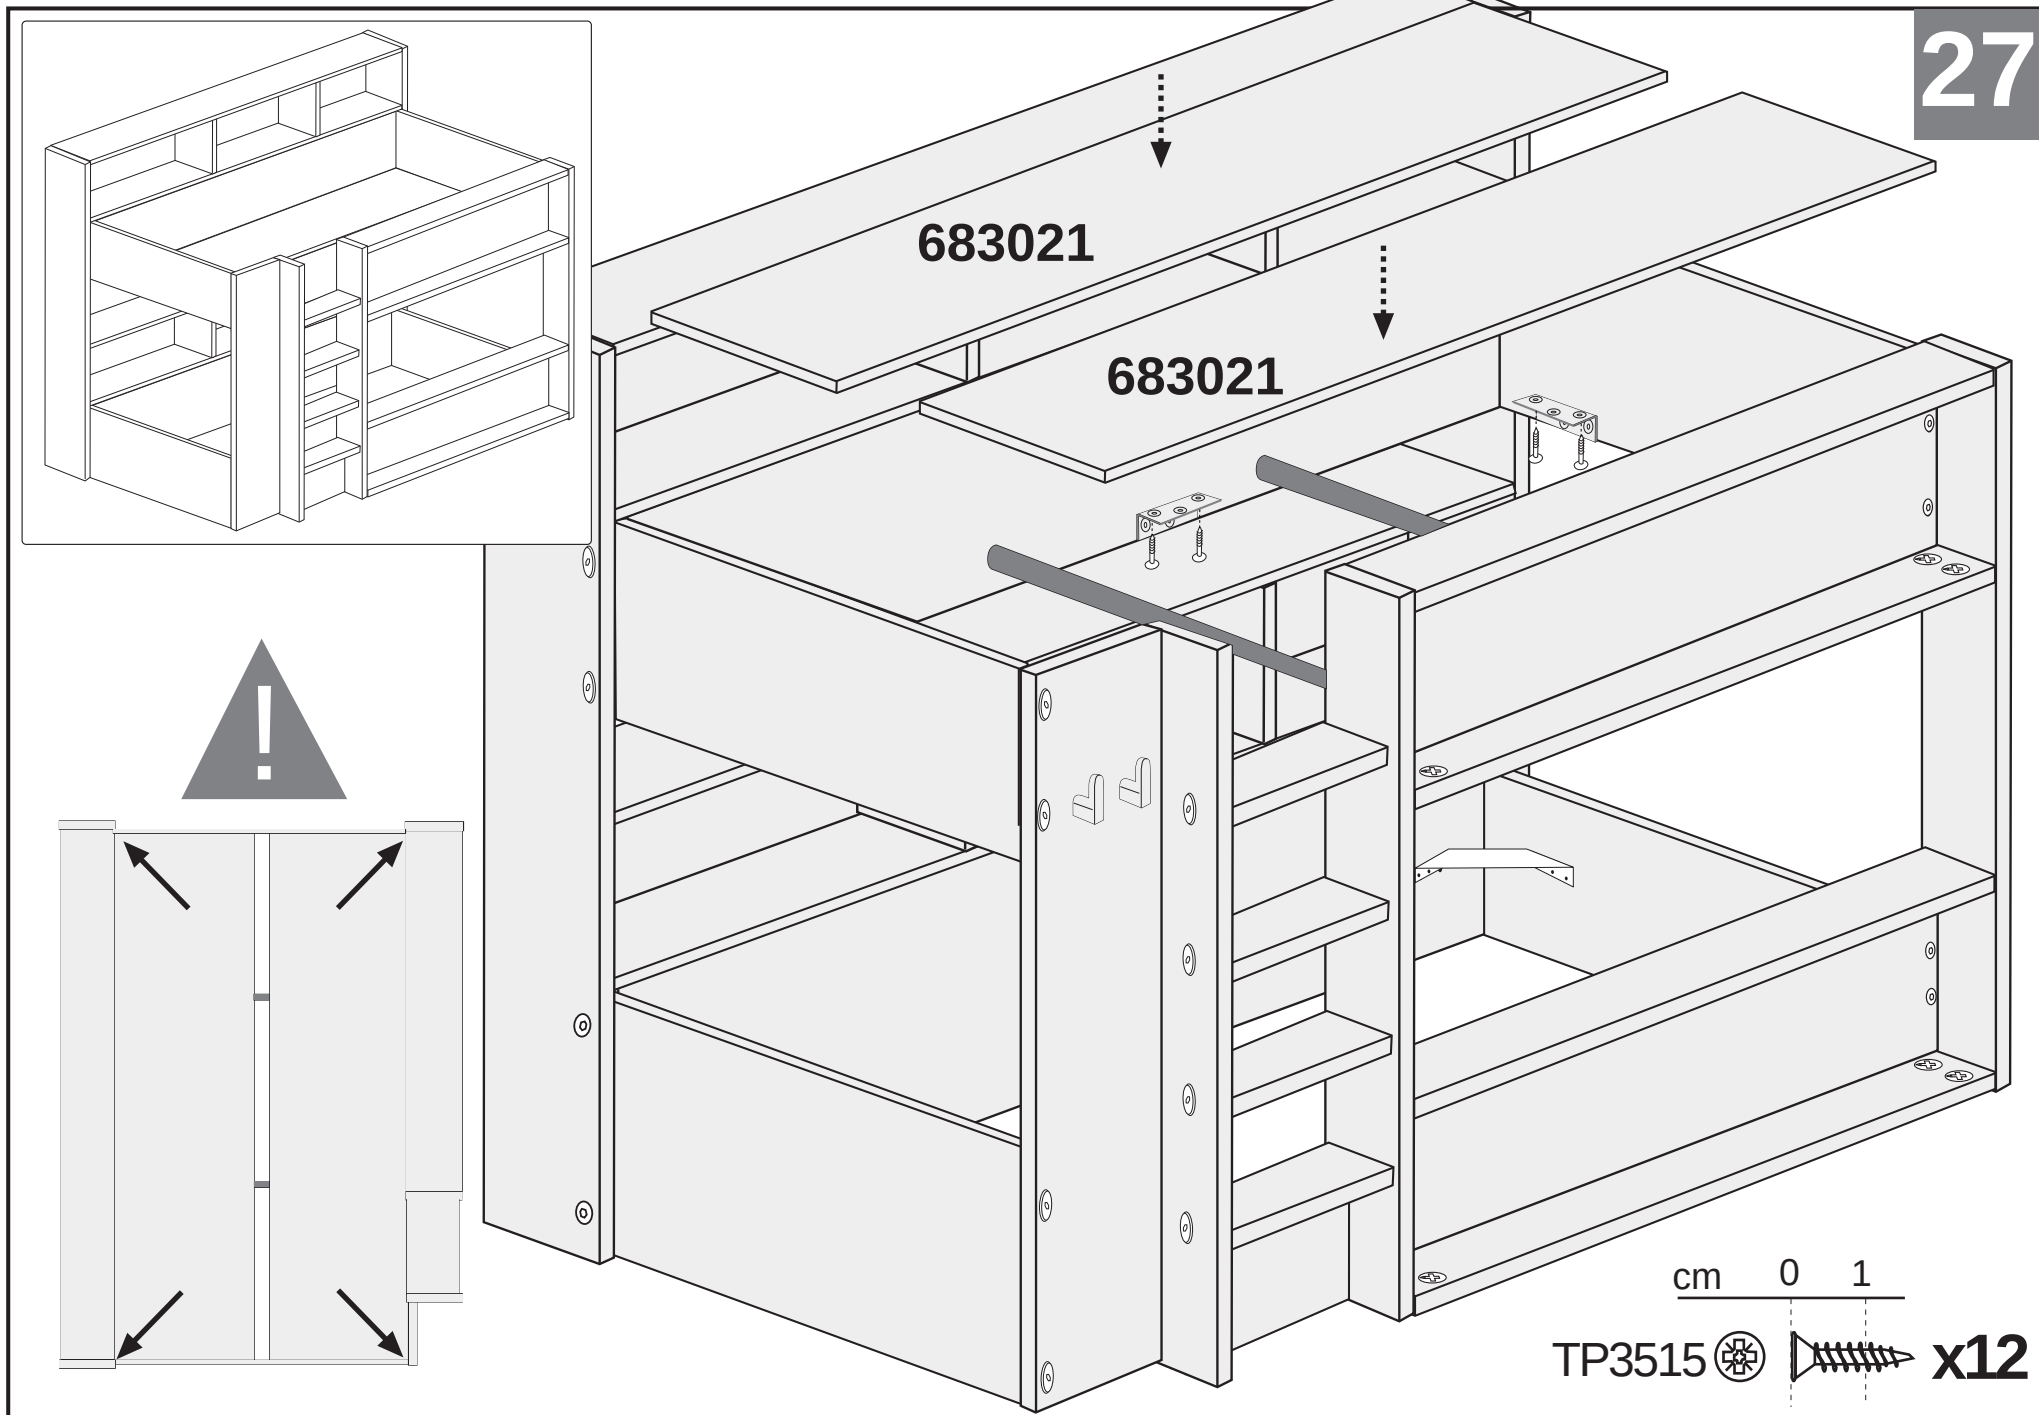

28

**no incluido / not included
pas inclus / não incluído**

